

qdmr - User Manual

**A universal codeplug programming
tool for Linux and MacOS X.**

Hannes Matuschek, OV Y07, DARC <dm3mat@darcd.de>

qdmr - User Manual: A universal codeplug programming tool for Linux and MacOS X.

by Hannes Matuschek

This document covers qdmr version 0.9.0.

Copyright © 2021 Hannes Matuschek

About This Document

This document contains a brief manual for the qdmr graphical user interface (GUI) application to program DMR radios. The aim of this application is to provide a simple to use, platform and vendor independent and well documented code-plug programming software (CPS) for popular DMR radios.

This document is available in several formats:

- HTML [<https://dm3mat.darc.de/qdmr/manual/>],
- PDF [<https://dm3mat.darc.de/qdmr/manual.pdf>] and
- EPUB 3 [<https://dm3mat.darc.de/qdmr/manual.epub>].

This document is released under the conditions of the Creative Commons Attribution-ShareAlike 2.0 [<https://creativecommons.org/licenses/by-sa/2.0/>].

Table of Contents

Foreword	v
1. Introduction	1
Basics: Repeater operations	1
Echolink	2
DMR Introduction & Origin	3
DMR Simplex Operation	7
Local Repeater Operation	8
Private calls	9
Data services	10
Textmessages (SMS)	10
Position reporting to the APRS network	10
Talk Group Operation	11
Cluster	12
Roaming	12
Technical background	13
Time Slots	13
Color Codes	13
Codeplug Assembly	14
General radio-wide settings.	15
Creating Contacts	15
Assemble group lists	16
Creating channels	16
Assembling zones	20
Assembling scan lists	21
DMR Networks	21
Reflectors (DMR+)	21
2. The Graphical User Interface	23
General configuration	23
Creating Contacts	24
Assembling RX Groups	25
Creating Channels	26
Edit digital channels	27
Edit analog channels	27
Assembling Zones	28
Assembling Scan Lists	29
Edit Scan Lists	30
Setup GPS/APRS Position Reporting	30
Edit/Create GPS Systems	31
Edit/Create APRS System	31
Roaming	31
Programming the radio	32
Permissions	33
Application Settings Dialog	33
Location settings	33
Radio programming settings	34
Call-sign DB settings	34
Commercial feature settings	34
3. Extensible Codeplug File Format	35
Radio settings	35
Radio IDs	36
DMR Radio IDs (dmr)	36
Contacts	37
DMR Contacts (dmr)	37
Analog DMTF Contacts (dtmf)	37
Group lists	38

Channels	38
Common attributes	39
Digital channel attributes	39
Analog channel attributes	40
Zones	40
Scan lists	41
Positioning Systems	41
Common attributes	42
DMR position reporting system attributes	42
APRS attributes	42
Roaming Zones	42
4. Device specific extensions	45
OpenGD77 Codeplug Extensions	45
Channel extension	45
Radioddity Codeplug Extensions	46
TyT Codeplug Extensions	46
Button settings extension	46
AnyTone Codeplug Extensions	46
5. Table Based Codeplug Format	47
Line comments	47
General configuration	47
Contact table	48
RX group list table	48
Digital channel table	49
Analog channel table	50
Zone lists	50
Scan lists	51
GPS Systems	51
APRS Systems	52
Roaming Zones	52
6. The dmrconf command line tool	53
Reading and writing codeplugs	53
Reading a codeplug	53
Writing a codeplug	55
Writing the call-sign DB	56
Encoding a call-sign DB	56
Various features of dmrconf	56
Getting help	57
Detecting the radio type	57
Inspecting binary codeplugs	57
Danger zone	57
dmrconf	59
Glossary	63

Foreword

Before you start with programming your DMR radio, get familiar [<https://www.dmrfordummies.com/>] with this digital mode. I have also written a brief introduction into DMR. You will find it in Chapter 1, *Introduction* (also available in german [https://dm3mat.darc.de/qdmr/manual/script_de.pdf]). If you are already familiar with DMR, skip that chapter and head directly to Chapter 2, *The Graphical User Interface*, where I describe how qdmr is used.

Digital mobile radio (DMR) was not invented for the use in amateur radio. It was rather designed to be a radio standard for commercial applications in large companies (e.g., airports etc.). Therefore many features of this standard are of no use for ham radio or are even illegal (e.g., encryption). This complexity of the standard makes the programming of the radios cumbersome.

Moreover, the resulting configuration (codeplug) is highly device-dependent. These codeplugs cannot be shared between different devices let alone between different vendors. For commercial applications, this is not a big problem as a company will most likely buy identical radios at once from one company. Thus codeplug can be shared between all radios.

For ham radio applications, this incompatibility is a real issue. Since assembling a decent codeplug for one region is hard enough, doing the same work all over again for different models of different vendors is not manageable.

Finally, the typical code-plug programming software (CPS), particularly those for cheap Chinese DMR radios, is by no means user-friendly and seldom documented completely. Many options are named cryptic and it is not possible to identify which options are necessary for basic DMR operation. Moreover, the CPSs provided by the vendors usually only run under Windows.

The aim of the qdmrproject is to overcome these shortcomings of typical CPSs. It has a reduced feature set only supporting those options necessary of amateur radio usage. It tries to be user-friendly by finding repeaters nearby and importing their input and output frequencies. Moreover, it stores the final codeplug not in a device-specific binary format but in a human-readable text format that is device independent and can therefore be shared across multiple device and even across vendors.

Finally, I try to keep the application well documented. This manual is part of this effort. It is a guide on how a codeplug is set up using qdmr.

Chapter 1. Introduction

Abstract

The chapter tries to provide an introduction to DMR (digital mobile radio) targeted at the unexperienced operator and anyone interested in this topic. I try to hide details until it gets absolutely necessary to explain them. The majority of DMR introductions I've found, are more or less extensive glossaries (if you are interested in that, see Glossary). They are hard to comprehend, unless one has at least some experience with DMR.

The perceived complexity of DMR comes from its origin as a radio standard for commercial applications at large events and companies (i.e., trunked radio [https://en.wikipedia.org/wiki/Trunked_radio_system]). Therefore, I will first describe an example how DMR is used commercially before I describe how it is used in amateur radio. I hope that this approach will make some of the weird terms and concepts of DMR clearer.

Basics: Repeater operations	1
Echolink	2
DMR Introduction & Origin	3
DMR Simplex Operation	7
Local Repeater Operation	8
Private calls	9
Data services	10
Textmessages (SMS)	10
Position reporting to the APRS network	10
Talk Group Operation	11
Cluster	12
Roaming	12
Technical background	13
Time Slots	13
Color Codes	13
Codeplug Assembly	14
General radio-wide settings.	15
Creating Contacts	15
Assemble group lists	16
Creating channels	16
Assembling zones	20
Assembling scan lists	21
DMR Networks	21
Reflectors (DMR+)	21

Basics: Repeater operations


This section briefly describes the common amateur radio FM-repeater operation. The majority of all licensed operators will be familiar with this topic.

If you are not yet licensed and interested into amateur radio, consider reading this section. Otherwise, skip right to the next section the section called “DMR Introduction & Origin”

The majority of connections between HAM operators are made in the so-called simplex mode. That is, the two operators transmit and receive alternately on the same frequency¹ and the connection is direct. This works very well on HF where world-wide direct connections can be made.

¹ This is actually called *semi-duplex*, however the term “simplex” stuck. The term simplex actually refers to the situation, where there is only one transmitter and possibly many receivers (e.g., broadcast).

Example 1.1. Typical FM simplex operation

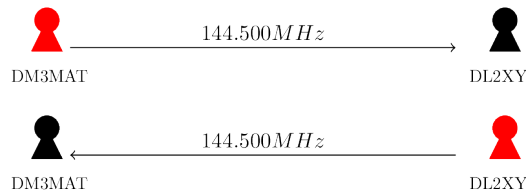

For this example, DM3MAT transmits directly to DL2XYZ on the frequency 144.500 MHz. The latter then also answers directly on the same frequency.

On higher frequencies, however, radio waves behave more like light and it gets increasingly more difficult² to bridge significantly higher distances than to the horizon. This fact limits the operating range of simple hand-held radios. To still cover a large area, repeaters can be used.

Repeater or relais are autonomous amateur radio stations that are usually located on a mountain, hill or high tower. This allows them to easily cover a large area. They receive signals from HAM operators and retransmit them at the same time. To do that, they cannot send and receive on the same frequency (otherwise they would interfere with themselves). Therefore, repeater operate in the so-called duplex mode. That is, the repeater receives on one frequency (the so-called input frequency) and simultaneously transmits the received signal on another frequency (the output frequency).

Example 1.2. Simple FM repeater operation




For this example, DM3MAT sends on the input frequency 431.9625 MHz to the repeater DL0LDS. The repeater transmits the received signal on the output frequency 439.5625 MHz. On that frequency, DL2XYZ receives the original call.

The Example 1.2, “Simple FM repeater operation” shows a common repeater operation on UHF. Here, the operator DM3MAT transmits its call to DL2XYZ not directly but on the input frequency of the repeater DL0LDS (431.9625 MHz). The repeater receives the call and transmits it simultaneously on its output frequency (439.5625 MHz). This signal is then received by DL2XYZ. Consequently, the call has reached its destination, although DM3MAT and DL2XYZ may not be able to communicate directly. The reply of DL2XYZ to DM3MAT follows the same path. Here DL2XYZ transmits on the repeater input frequency, and DM3MAT receives that call on the repeater output frequency. This way the two operators can communicate with each other even if they are not able to reach each other directly.

Echolink

However, there are situations, where two operators are far away and they cannot reach the same repeater. For these cases, it is possible to connect two repeaters via the EchoLink [<http://www.echolink.org/>] network.

²Also on VHF and UHF, larger distances can be bridged using an elevated location and larger antennas.

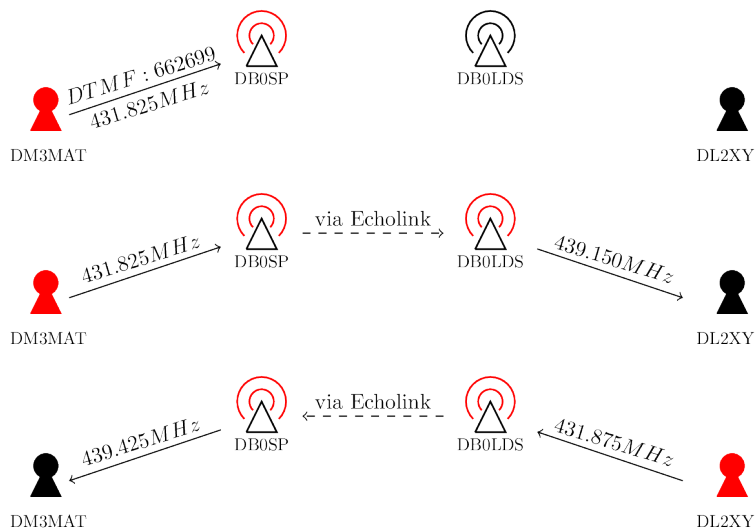Example 1.3. Repeater operation with Echolink

DM3MAT connects repeaters DB0SP (near Berlin) and DB0LEI (near Leipzig) via EchoLink. Now, they are able to communicate with each other.

This network allows to link FM repeaters via internet™ or to connect directly to a remote repeater via internet. Many FM repeaters are connected to the EchoLink network, allowing for world-wide communication with simple hand-held radios.

Frequently, it is also possible to control a repeater over-the-air and to connect that repeater to some other repeater via EchoLink. Usually, this can be done by sending the EchoLink number of the destination repeater you want to link to using DTMF to the local repeater. This is shown in Example 1.3, “Repeater operation with Echolink” above. There, DM3MAT sends the EchoLink number 662699 of the repeater DB0LEI near Leipzig to his local repeater DB0SP near Berlin. Then the local repeater (DB0SP) will link with the destination repeater (DB0LEI) via the EchoLink network. For some limited time, both repeaters will act like one logical repeater. That is, everything that is received by one repeater will also be transmitted by the other. This way, the two operators DM3MAT and DL2XYZ can communicate although they cannot reach a common repeater.

Note

Once two repeaters are linked via EchoLink, they behave like a single repeater.

All over the world, there are FM repeater that are part of the EchoLink network. Therefore, it is possible to communicate world-wide at any time using simple hand-held radios that are as cheap as 40€ or even less.

DMR Introduction & Origin

DMR (digital mobile radio) is a digital radio standard to transmit speech and data. That is, the speech is not directly modulated on the carrier but digitalized and compressed first using a lossy compression codec (VOCODER). The speech is then transmitted as data packets. The latter allows to attach meta-information to the data packet like source and destination of the packet.

DMR was designed to be the digital replacement for analog trunking networks in commercial applications. A classic example for such a commercial application of DMR would be a civil air port. With this, I do not mean the air-traffic radio but all the communication of the ground staff in and around the actual air port buildings.

At such an imaginary air port, there is a huge staff with a wide variety of tasks. For example (without any claim of completeness):

- The cleaning crew,
- technicians,
- security staff,
- apron staff for refueling, luggage and catering,
- the fire brigade and
- the headquarters.

All these people carry a radio and should be able to

- Directly call the headquarters. All staff should be able to call the headquarters directly.
- Direct communication between members of the same group, without interfering with other groups. For example, the cleaning staff should be able to communicate with each other, without interfering with the fire brigade.
- Each person should be able to call a complete group. For example, the headquarters may call the entire fire brigade or one member of the security staff may call the entire security for help.

An air port, however, is a rather large area. Consequently, not all staff members are able to reach all others. Therefore, some repeaters must be installed to cover the entire air port including all interiors.

If you compare this scenario with the classic FM repeater networks (see the section called “Basics: Repeater operations”), it gets clear that is hard to implement these concepts using analog FM repeaters. Especially, if several repeaters are connected through a network. In this case, a single call on one repeater may block the entire network³.

Certainly, it would be much better if only those repeaters get activated that are actually required for the communication between two parties. Then, the remaining repeaters are still available for the rest of the staff. This routing, however, should happen automatically. An operator may not know, which repeater to use to reach a particular person.

DMR was designed to implement such complex communication networks without requiring from every participant to have detailed knowledge about the structure of the network. That is, the knowledge about where every repeater is installed and which participants are reachable on which repeater.

Note

DMR is more similar to a phone network than to classic FM repeater networks.

Speaking of phone networks: Each participant and thus his/her radio is uniquely identified by a number. The DMR-ID. This is a number between 1 and 16777215. And like for any other phone network, each participant may call any other directly using this number. This call is called *Private Call*.


And there are groups. Each of these so-called *Talk Groups* is also assigned a unique number. A talk group can be used to group all staff with a specific task (e.g., the security, fire brigade, etc.). It is then possible to reach all members of this group at once by performing a *Group Call* to that talk group. The network, however, does not know which participant is member of which group. Consequently, the radio of the participant needs to know which group calls to accept and which to ignore.

Note

This point is important to remember: The DMR network does not know which participant is member of which group. The radio needs to be configured to react on specific group calls.

³ There are means to implement this concept on analog repeater networks using tone-signaling techniques (e.g., DTMF, five-tone etc.).


Example 1.4. Simplified air-port network

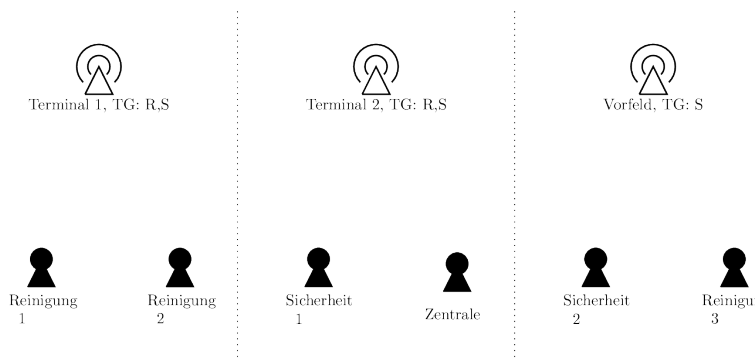

There are 3 cleaning staff, two security and one headquarters. To cover the entire area, three repeaters are required. One in terminal 1, one in Terminal 2 and one on the apron.

Example 1.4, “Simplified air-port network” is a simplified air port network (in reality, it is much larger and way more complex). Consider the situation, where a cleaning stuff 1 & 2 want to communicate. At the same time, the headquarters want to talk to security 1. In an simple analog network, the call between cleaning 1 & 2 would block the entire network and therefore the call between the headquarters and security 1.

Example 1.5. Simultaneous calls

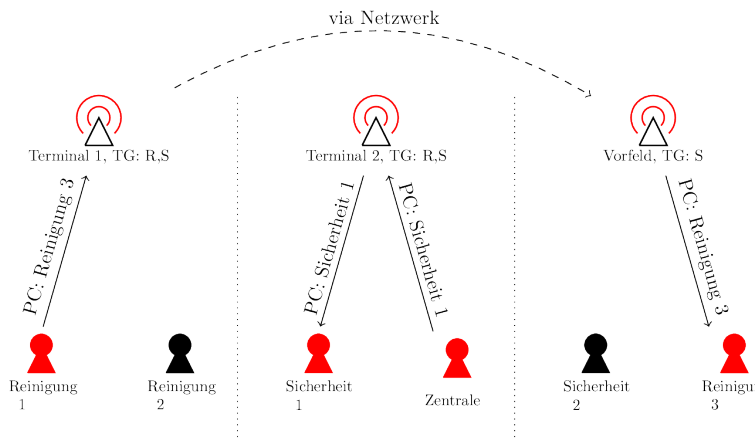

Two Simultaneous private calls in the example network between cleaning 1 & 3 as well as between headquarters and security 1.

Private calls in DMR networks only use those repeaters, that are actually required to establish the communication. This is shown in Example 1.5, “Simultaneous calls”: Cleaning 1 starts a private call to cleaning 3. As the DMR network knows that cleaning 3 was last active on the apron repeater, this call gets routed only though repeaters terminal 1 and apron. The repeater in terminal 2, however, is not affected. Consequently, this repeater remains available for the call between the headquarters and security 1.

Note

The network only knows at which repeater each participant was last active. The network will therefore try to establish a connection though that repeater to the participant.


During the call between cleaning 1 & 3, the repeaters in terminal 1 and apron are blocked. This means, that the headquarters may not be able to reach cleaning 2 and security 2 immediately. This sounds worse than it actually is. In contrast to classic phone networks, a direct call is considered interrupted,

once the calling participant releases the PTT button. To this end, the headquarters may use the pauses between calls to reach the other participants.

In the next Example 1.6, “Temporary subscription of talk groups.”, the headquarters want to reach all cleaning staff. Therefore, they start a group call to the talk group “cleaning” (C for “cleaning” and S for “security”). With this call, it can reach cleaning 1 & 2 immediately. However, cleaning 3 does not receive that call.

This is due to the fact, that the DMR network does not know which participants are members of which groups. As the cleaning crew is usually not on the apron, the apron repeater has not subscribed the talk group “cleaning”. Therefore, it does not forward group calls to that talk group.

Example 1.6. Temporary subscription of talk groups.

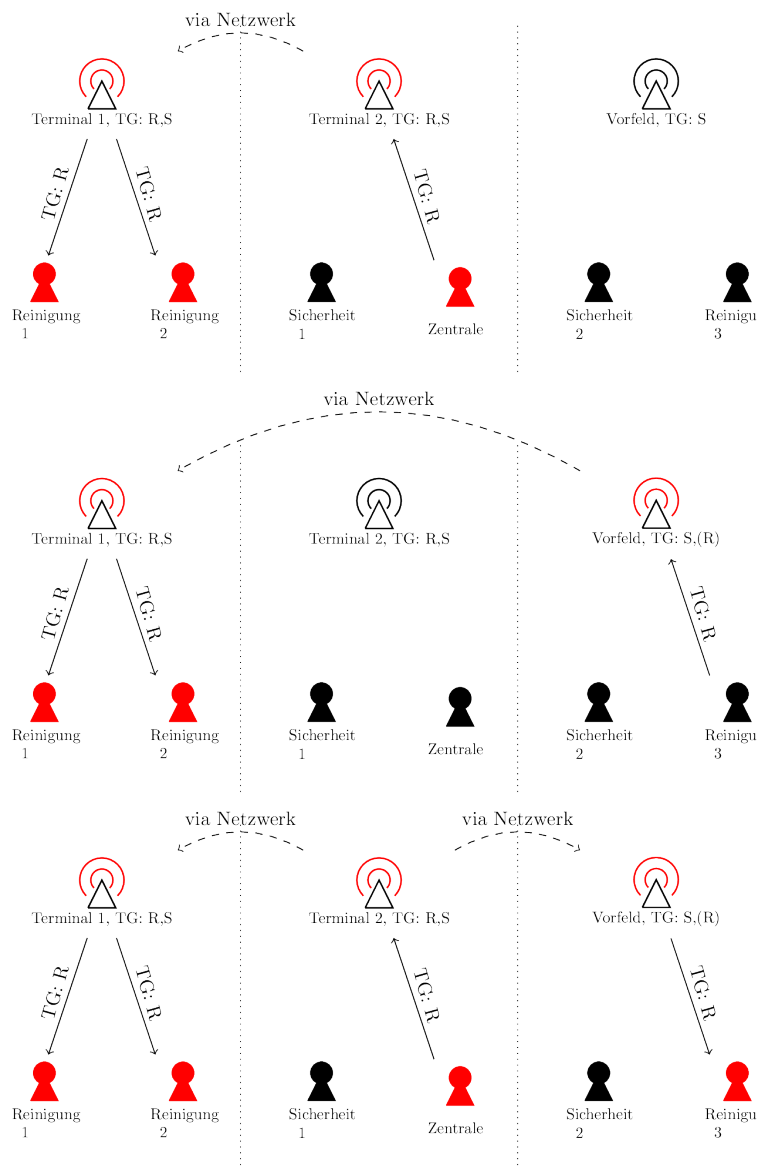

To remain reachable for group calls, cleaning 3 needs to temporarily subscribe the apron repeater to the “cleaning” talk group. This can be done by starting a group call to that talk group on the apron repeater. Then the repeater will temporarily subscribe to that talk group for a limited amount of time (usually between 10-30min). During that time, the repeater will forward group calls to that talk group and cleaning 3 remains reachable via that repeater.


This temporary subscription will be renewed every time a participant starts a group call to that talk group on this repeater.

With these examples, the most basic terms of DMR (DMR-ID, talk group, private and group calls as well as talk group subscriptions were introduced and explained on an example network. The following sections will concern the use of DMR in ham radio.

DMR Simplex Operation

The most simple form of a DMR QSO⁴ is the simplex QSO. That is a direct connection between two DMR radios. Like for the DMR repeater operations, this could be a private, group or so-called *All Call*.


Example 1.7. Simplex private call.

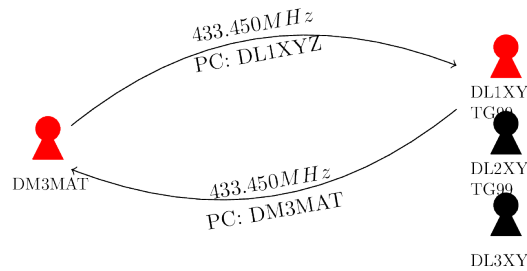

In Example 1.7, “Simplex private call.” a simple simplex private call from DM3MAT to DL1XYZ is shown as well as its reply. Both operators transmit and receive on the same frequency (here the DMR calling channel at 433.450 MHz). Although other operators are in the area (DL2XYZ & DL3XYZ) which receive the signal, their radios remain silent. This is because this is a private call to a specific operator and only the radio of that operator will receive the call. All others ignore the call. The channel, however, remains occupied during that call.

At that point it is worth mentioning, that if DL1XYZ answers directly to the initial call by pressing the PTT, he will answer with a private call to DM3MAT. He does not need to search for the number of DM3MAT in his address book. The direct answering to calls is only possible for several seconds after the end of the initial call. After that period (called *Hang Time*) a press on the PTT will start a call to the default contact (see the section called “Creating channels”) associated with the simplex channel.

Example 1.8. Simplex group call

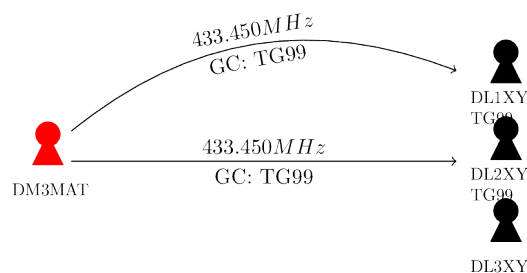


It is not only possible to call single operators in simplex mode. Also groups can be called using group calls. A common talk group for the simplex mode has the number 99, (TG99, for “talk group 99”). These group calls are then received by all radios that are configured accordingly. Like for the repeater operation, also in simplex mode, the radio needs to know which groups the operator belongs to and therefore which talk groups to receive on which channels. This is done using so-called *Group Lists*, which are discussed later.

In Example 1.8, “Simplex group call” such a simplex group call is shown. There DM3MAT calls the talk group TG99. As DL1XYZ as well as DL2XYZ configured their radios to receive that call on

⁴QSO is a code for call or connection between two amateur radio stations.

simplex channels, they do so. DL3XZY did not, so he does not receive the call. DL1XYZ & DL2XYZ can now respond to that call by pressing on the PTT within the hang time irrespective of their default contact for the channel.

Example 1.9. Simplex all call

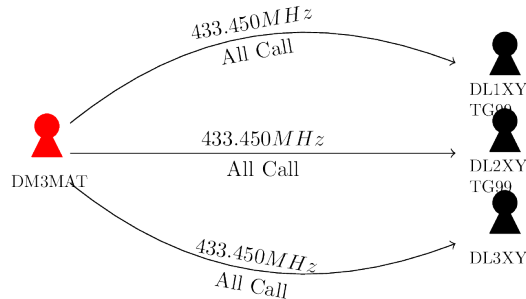

To be sure that a simplex call gets received by all operators in the area, a so-called *All Call* should be used. This is a special call type to the reserved number 16777215, that gets received by all radios irrespective of their configuration. For the Example 1.9, “Simplex all call”, the all call by DM3MAT gets received by all operators including DL3XYZ. By directly answering within the hang time, all participants are able to respond to that call with an all call as well.

Note

In short: A DMR channel consists of a transmit and receive frequency (identical on simplex channels), a default contact that gets called whenever the PTT button is pressed and a list of group calls the radio will receive on that channel.


Table 1.1. DMR simplex frequencies

Name	Frequency	Name	Frequency
S0 (call)	433.4500 MHz	S4	433.6500 MHz
S1	433.6125 MHz	S5	433.6625 MHz
S2	433.6250 MHz	S6	433.6750 MHz
S3	433.6375 MHz	S7	433.6875 MHz

Table 1.1, “DMR simplex frequencies” lists the common simplex channel frequencies. The channel S0 is the calling channel. Especially in densely populated areas, you should switch to another channel for the actual QSO and use S0 only for the initial call.

Local Repeater Operation

One central objective of DMR is to be repeater transparent. That is, it does not matter which repeater you use. You will always be able to reach the same groups. An be always reachable through the same means (private or group call). This concept is violated by the talk groups 8 & 9. The are the regional and local talk groups.

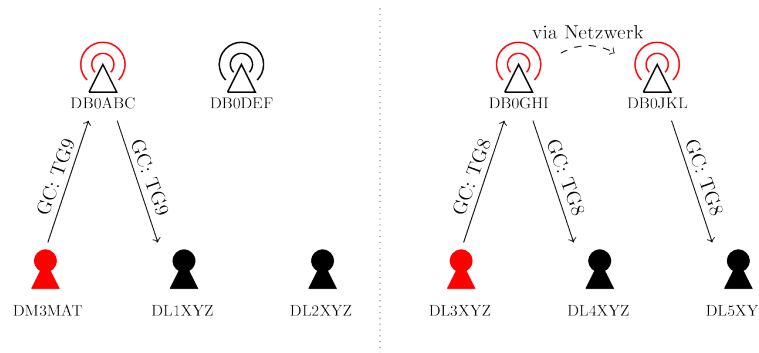
Example 1.10. Two regions with two repeaters each.

The talk group 9 (TG9) is the so-called local talk group. Group calls to that talk group are not forwarded through the network and only retransmitted locally. Usually “locally” means only by the repeater. Sometimes, however, these calls are also forwarded to other repeaters nearby. This case is shown in Example 1.10, “Two regions with two repeaters each.” on the left side. Here DM3MAT sends a group call to TG9 via the repeater DB0ABC. This call is not forwarded to any other repeater and thus is only received in the local area around the repeater. DL1XYZ is in that local area and may receive that call if he configured his radio to receive calls from the TG9.

The talk group 8 (TG8) is the so-called regional talk group. A call to that talk group is usually forwarded to all repeaters within a specific region. Which repeaters are part of a “region”, is a decision of the repeater administrators. So it is hard to predict to which repeaters a regional call gets forwarded. In Example 1.10, “Two regions with two repeaters each.” on the right side, DL3XYZ sends a group call to TG8 to the repeater DB0GHI. This call then gets forwarded to all repeaters in the “region”. In this case, also to the repeater DB0JKL within the same region. Therefore, all participants within that region are able to receive the group call if they configured their radios accordingly. In this example, not only DL4XYZ received the call but also DL5XYZ who is not close to the repeater DB0GHI and would have missed a group call to the local talk group.

Private calls

Private calls allow to call other participants directly without interfering with other calls (except for using the repeater). In the introduction into DMR above, the private call over several repeaters has been described. I consider this aspect of DMR particularly interesting. With the exception of TG 8 & 9, private and group calls are transparent with respect to the repeaters used. It simply does not matter which repeaters are actually used to establish a connection. Therefore, I as a user do not need to know where the other participants are located.

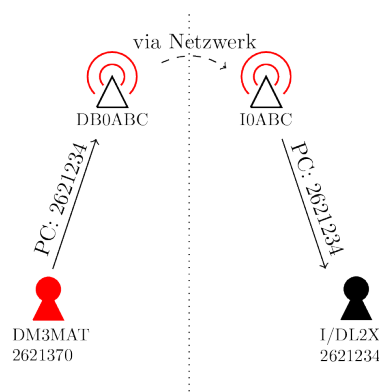Example 1.11. Direct calls between countries.

Consider the typical vacation situation: An OM at his holiday location may want to participate in his local afternoon net. He can do that by simply starting a group call to the nets talk group over the

repeater at his holiday location. Now the local holiday repeater has subscribed to the local talk group at home and the OM can participate as usual in the net. The other participants in the net may not even recognize that the OM is at his holiday location.

In a similar fashion, private calls can be started and received at the holiday location. The DMR network knows the repeater a participant was last active on. By briefly pressing the PTT at the holiday repeater, the OM is registered and can now receive private calls at his holiday location. The friends at home may not even know where the OM's current location is nor which repeater to use to reach him. The network takes care of that.

Example 1.11, "Direct calls between countries." shows such a private call between countries. DM3MAT starts a private call to DL2XYZ using his local repeater DB0ABC. DL2XYZ, however, is at his holiday location in Italy. As he had registered himself at that repeater, the private call gets forwarded to the holiday repeater IOABC in Italy, where DL2XYZ can receive it. DM3MAT does not need to know the location of the callee nor which repeaters are near to him. This automatic routing of calls (group and private calls) is a major advantage over the analog FM repeater network and EchoLink. For the latter, the ID of the destination repeater needs to be known.

Data services

As DMR is a digital mode that transports digitalized speech, it is possible to transfer other data too. Consequently, there are some other digital services provided with DMR. First, there are text messages similar to the one provided by mobile phones. It is also possible to transfer the own GPS position to the APRS network.

Textmessages (SMS)

With this service, you can transfer short text messages to other participants (like a private call) or to a talk group (like a group call). The latter is rather uncommon and should be avoided. In principle a text message works like a private call. If the destination is reachable, the text message will be routed to it.

There are also service numbers (free of charge). If messages are sent to them, certain information can be retrieved or forwarded to other networks (e.g. to the *DAPNET*). In Germany (and other countries) there are:

1. 262993 -- GPS and weather
 - Send `help` and you will receive a list of commands.
 - Send `wx` and you will receive the weather at the location of the repeater you used.
 - Send `wx CITY` and you will receive the weather at the specified city.
 - Send `gps` and the last GPS position is returned that you have sent to the DMR network.
 - With `gps CALL` you can retrieve the last position sent by the specified call.
 - Send `rsi` and you will receive a signal report from the repeater.
2. 262994 -- Repeater information & pager messages
 - Send `rpt` to receive a list of static and dynamic subscribed talk groups at the repeater.
 - Send `CALL MESSAGE` to send the given message to the given destination call in the DAPNET.

Position reporting to the APRS network

As mentioned in the previous section, it is possible to report the own position via the DMR network to the APRS network. This position can then be tracked at for example `aprs.fi` [<https://aprs.fi>]. To do that,


a radio with a build-in GPS receiver is required. But not even these devices are expensive anymore. Simple DMR hand-helds with build-in GPS receivers are available for about 120€.

Beside the text message services, it is also possible to transmit the position to the DMR network using a special service number 262999. How the radio is configured to do that, depends heavily on the device being used.

Talk Group Operation

As mentioned in the section called “Private calls”, DMR aims at being repeater transparent. That is, it does not matter which repeater is used for the operation. This is also true for talk groups. In this section, I'll continue with the example of a OM at his holiday location who wants to participate in his afternoon net. For example, the afternoon net is happening on the talk group 2621 (Berlin/Brandenburg, BB). This talk group is usually statically subscribed on all repeaters in the states Berlin and Brandenburg. That means that the local afternoon net can be performed in this talk group without any additional action in this area. (see Example 1.12, “Talk group operation between countries” top image).

Example 1.12. Talk group operation between countries

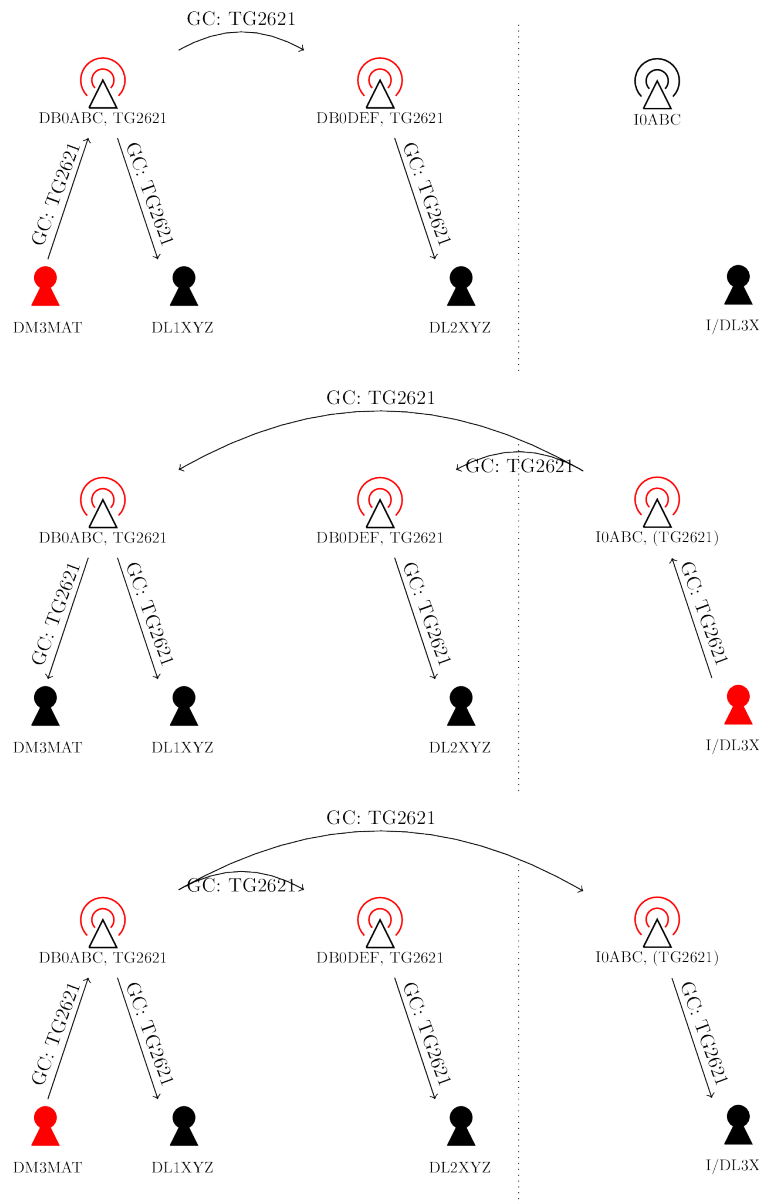

For the OM at his holiday location, this is not true. An Italian repeater will certainly not subscribe the BB talk group statically. Therefore, the OM at the holiday location will not hear his afternoon net. He knows when this net starts. So he can perform a group call to the that TG shortly before the net starts (see Example 1.12, “Talk group operation between countries” second image). This will subscribe the BB talk group temporarily at the holiday repeater (IOABC). Now, the OM can hear and participate in the afternoon net. The subscription will be renewed whenever he starts a group call to that TG.

Once the OM subscribed the TG to the holiday repeater, he can participate normally at his afternoon net. All other participants will not even notice that he is not in the area and is participating from an Italian repeater.

Table 1.2. Some talk groups

Name	Talk group number
Global	91
Europe	92
Germany	262
Mecklenburg-Vorpommern & Sachsen-Anhalt	2620
Berlin & Brandenburg	2621
Hamburg & Schleswig-Holstein	2622
Niedersachsen & Bremen	2623
Nordrhein-Westfalen	2624
Rheinland-Pfalz & Saarland	2625
Hessen	2626
Baden-Württemberg	2627
Bayern	2628
Sachsen & Thüringen	2629

Cluster

In contrast to the regional talk group TG8, all other talk groups are reachable from everywhere in the DMR network. This means, that the OM at his holiday location can easily participate in his afternoon net from everywhere as described above.

If the net, however, is happening in the regional TG8, the OM at his holiday location cannot participate. This talk group is only reachable from within the region. If the OM starts a call to TG8, he would only reach the region in Italy and not the region at home.

For this reason, some regional *clusters* of repeaters are linked to so-called “Cluster”. These clusters provide “normal” talk groups for the repeater within a region. These talk groups are then also reachable from the outside. A list of regional clusters and their associated talk group numbers can be obtained under bm262.de/cluster/ [<http://bm262.de/cluster/>].

Roaming

Usually all repeater within a region will subscribe the same talk groups. This allows to operate in these talk groups a repeater transparent way. It therefore does not matter which repeater is being used within the region, the same talk group remains reachable. In the region Berlin & Brandenburg, this is the TG2621.

It therefore makes sense to enter all repeaters into one list that have the same talk groups subscribed. If the radio now would automatically select a reachable repeater, one could drive around in the region and would stay connected to these talk groups irrespective of the own position in the region. This

feature exists and is called *Roaming*. Many of the slightly more expensive devices support this feature (e.g., AnyTone). The cheapest ones usually do not.

To use this feature, all channels with a certain talk group should be added to a list. The so-called *Roaming Zone*. This could actually be done automatically, but the programming software for these devices is usually not very user friendly.

If the signal strength of the currently selected repeater falls below a certain threshold (usually -105dBm), the radio will start to search the roaming zone for a repeater which is stronger than this threshold. This only happens if the radio is in standby. That is, if neither something is received nor transmitted.

Did the radio find a stronger repeater in the roaming zone, it automatically changes to that repeater. The new repeater does not necessarily needs to be the strongest in the zone. It only needs to be stronger than the threshold. If no stronger repeater is found, the radio remains on the currently selected one.


This roaming can also be set to “manual”. This is, the roaming search will only start if signal strength is lower than the threshold and the PTT is pressed or the search is started from the menu.

Technical background

In the previous sections, I tried to explain the basic concepts of the DMR operation. That is the repeater independent private and group calls. This section concerns the more technical details of the DMR mode. In particular the *Time Slot* and *Color Code*.

Time Slots

As mentioned before, DMR is a digital mode. The speech signal is first digitized and compressed with a lossy compression codec. The latter is also called *VOCODER*. Modern codecs are very efficient and allow to transfer two independent speech signals within a single 12.5kHz wide channel. This is exploited in DMR using a technique called *TDMA*.

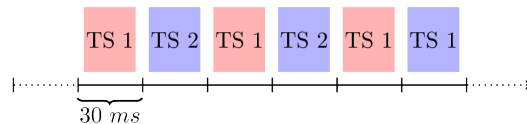

TDMA means “time-division media access” and means that two independent calls can happen simultaneously on one physical channel. To achieve this, each call is assigned a *Time Slot* (time slot 1 & 2) and both are transmitting and receiving only within their assigned time slot. These time slots are very short. For DMR they are only 30ms long. This short time, however, is sufficient to transfer audio for at least 60ms. DMR therefore allows for two independent and simultaneous calls on a single channel.

Who or better when time slot 1 or 2 happens, is determined by the repeater. The repeater defines the beat. This also implies that time slots are irrelevant for the simplex operation. Thus you can ignore the time slot settings when programming simplex channels. (see the section called “Codeplug Assembly”).

Note

What happens on each time slot, is a convention defied by the repeater. A general suggestion is that regional communication happens on the time slot 2 while trans-regional communication should happen on time slot 1.

Color Codes

Color Codes are a technical tool to avoid conflicts between repeaters operating on the same frequency. This usually happens in commercial applications of DMR. One company usually gets only a small

number of frequencies assigned. To cover the entire campus, much more repeaters are needed than frequencies are available. Consequently, overlapping repeater ranges on the same frequency will occur and two repeaters may receive the call of a participant. Then, the color code allows the repeater to detect whether a call was intended for it. Only if the color code of a call matches the color code of the repeater, the repeater will react on that call.

This issue usually does not arise in amateur radio applications. We just have enough channels. Hence the color code is usually set to 1. In very densely populated areas, however, overlapping repeater ranges may still occur and different color codes might be used there.

Note

To use a repeater, you not only need to know the input and output frequencies but also the color code of the repeater.

Codeplug Assembly

After the basic concepts and technical details of the DMR mode has been discussed, it is time to consider the actual configuration of the RMD radios. This usually not done via the keypad of the radio but with the help of a separate software. The so-called *CPS* or codeplug programming software.

Before we can start, we need like any other participant in the DMR network a unique number, the DMR ID.

Note

You can get your personal and unique DMR ID from radioid.net [<https://www.radioid.net/>]. There you need to verify that you are a licensed ham operator.

You will receive your personal DMR ID usually within 24h per Mail. Once you've got your ID, you can start.

As this script is intended for the beginners, it is very likely that you do not own a top-shelf Motorola device but rather one of the cheap devices of the common manufacturers.

Warning

If you do not own a DMR device yet but consider to buy one, you should explicitly check whether it supports DMR Tier I and II⁵. Ignore any marketing BS and check the technical description of the product for Tier I & II. If it is not mentioned there, simply skip that product. This is particularly true for the Baofeng MD-5R but not the RD-5R.

The manufacturer of the device of your choice will provide the CPS for download you need to program your radio. Usually you will also find there firmware updates for your device. The manufacturers usually provide a separate CPS version for every device and even firmware revision. So please check whether you've got the correct CPS version. The configuration of the device differs from device to device and even more from manufacturer to manufacturer. The basic setup, however, remains the same.

When you start the CPS for the first time, you will likely note two things. First, that the user experience stems from the last millennium (about Windows 3.11). And second, that there are a tone of obscure and badly translated options for your device. These options are usually named cryptic and are not documented.

The configuration of your device usually happens in five-six steps:

⁵As usual, DMR is not a single standard but a family of standards. Tier I describes the simplex operation while Tier II considers the repeater operation and time-slots. You will therefore need a device that also implements Tier II to be able to work with repeaters.

1. General settings,
2. creating contacts,
3. assembling group lists,
4. creating channels,
5. assembling zones and
6. optionally assembling scan lists.

Within the following sections, I want to guide you through these steps.

General radio-wide settings.

The single most options within the general settings is your DMR ID and your call sign. These options are usually located under the label Radio Settings or General Settings⁶. Your DMR ID is entered in the field name Radio ID. Many radios support to enter several DMR IDs. This feature is usually not used in ham radio. In fact you will only always need a single DMR ID even with several radios.

Your call can be entered in the Radio Name field.

Creating Contacts

Once you have made the basic settings, you may create some contacts in your contact list. This list should contain all talk groups you are interested in, some private contacts to OM you know as well as some “service numbers” for the “echo”-service, SMS service etc. A sample is shown in Table 1.3, “Example contacts for germany”.

Table 1.3. Example contacts for germany

Name	Typ	Nummer	Name	Typ	Nummer
Local	group call	9	Ham/SiHo	group call	2622
Regional	group call	8	NiSa/Bre	group call	2623
TG99	group call	99	NRW	group call	2624
All call	all call	16777215	RhPf/Saar	group call	2625
World wide	group call	91	Hessen	group call	2626
Europe	group call	92	BaWü	group call	2627
D-A-CH	group call	920	Bay	group call	2628
Germany	group call	262	Sa/Th	group call	629
Austria	group call	232	Echo Test	private call	262997
Switzerland	group call	228	SMS Serv.	private call	262993
EMCOM EU	group call	9112	DAPNET	private call	262994
EMCOM WW	group call	9911	APRS GW	private call	262999
MeVo/SaAn	group call	2620	DM3MAT	private call	2621370
Ber/Bra	group call	2621

Of course there are much more talk groups. There are also talk groups for specific topics which are not necessarily targeted at a specific region. A rather complete list can be found in the Brandmeister Wiki [<https://wiki.brandmeister.network/index.php/TalkGroups>].

⁶The actual name may vary from manufacturer to manufacturer.

Assemble group lists

The next step is to assemble so-called *Group Lists*. These are simple lists of talk groups that you want to receive on a particular channel. As mentioned in the introduction, the network does not know which talk groups you are interested in. This must be programmed into the radio. Group lists do exactly that: They specify which talk groups you want to receive. All others are ignored.

You should at least create two group lists. One for the simplex operation, one for regional communication and optionally one for the trans-regional communication. You should also create one for each region you frequently visit.

The simplex group list is theoretically not necessary as simplex calls should always use the so-called *All Call*. Frequently, however, also the talkgroups TG99, TG9 and TG8 are used in simplex operation. Hence a group list with these talk groups is needed for the simplex operation.

Your trans-regional talk group should include the talk groups for the entire world TG91, your continent (e.g., Europe TG92), your country (e.g., Germany TG262) and also the emergency talk group (e.g., 9112 in Europe).

Finally the talk group for the local/regional communication should contain the local TG9, regional TG8 and the talk group for your region (e.g., TG 2621 for my region Berlin/Brandenburg). As I am also frequently in Saxony, I also created a group list for that region. My sample group lists are shown in Table 1.4, "Example group lists".

Table 1.4. Example group lists

Name	Group calls
Simplex	Local, Regional, TG99
WW/EU/DL	World wide, Europe, D-A-CH, Germany, EMCOM EU
Ber/Bra	Local, Regional, Ber/Bra
Sa/Th	Local, Regional, Sa/Th

Creating channels

Before we start assembling any channels, I should mention that DMR radios are also able to transmit and receive analog FM. You can also use them for classic FM simplex and repeater operation. In this section, I describe the configuration of digital DMR channels usually called "digital channels". The configuration of analog FM channels is not described. To create a DMR channel, you have to select digital for the channel type, for FM channels analog.

When you already have some experience with the analog FM repeater operation, the configuration of DMR channels may appear quite weird. For analog FM repeaters, you usually configure exactly one channel. For DMR repeaters you will configure at least two (one for each time slot) but usually many more. To cut a long story short, let me explain it with a concrete example.

Creating Simplex Channels

Table 1.5. Example simplex channel configuration

Name	RX Freq.	TX Freq.	TS	CC	TX Contact	Grp.List
DMR S0	433.4500 MHz	433.4500 MHz	1	1	all call	simplex
DMR S1	433.6125 MHz	433.6125 MHz	1	1	all call	simplex

Name	RX Freq.	TX Freq.	TS	CC	TX Contact	Grp.List
...

In Table 1.5, “Example simplex channel configuration” an example for a simplex channel configuration is shown. You should of cause extend it to all 8 simplex channels. The first column simply specifies the name of the channel.

The second and third columns specifies the transmit and receive frequencies for these channels. For simplex channels, these frequencies are the same.

In simplex operation, there is no repeater. That is, no instance that dictates a beat. To this end the choise of the time slot (TS) is irrelevant and usually TS1 is chosen.

The color code, however, matters. Repeater as well as your radio will ignore calls with a mismatching color code. For simplex channels, the color code 1 has been established.

The sixth column specifies the default transmit contact. For simplex channels, the so-called *All Call* should be chosen to ensure that really everyone can receive the call irrespective of the receivers group list settings. The default transmit contact specifies the contact (private, group or all call) that is called whenever the PTT is pressed. As mentioned earlier, there is an exception to that rule. Whenever you directly answer a call within in the so-called *Hang Time*, you will answer with the same call you received.

The last column specifies the to so-called *Group List*. This list specifies which talk groups are received on that channel. As mentioned earlier, no entry should be needed here as the all-call should be used as the transmit contact on simplex channels. Unfortunately, it is not uncommon to find several talk groups being used as transmit contacts on simplex channels like TG9, TG8, TG99. For these cases, a group list “simplex” was created earlier.

Within your CPS, you will find many more options for channels. The majority can be left untouched. At the end of this section, I will describe some of these settings briefly. Many of these settings are quite uncommon in amateur radio or even straight illegal.

The *Admit Criterion* specifies under which conditions your radio is allowed to transmit. For simplex channels, the option channel free should be chosen. This configures the radio to only transmit if the channel is currently free.

Creating repeater channels

Creating repeater channels is slightly more complex than creating simplex channels, as we need to create several channels per repeater. Before you can create any channels, you need to know which DMR repeaters are near to you. A good overview provides the repater book [<https://repeaterbook.com>]. There you can also filter for DMR repeaters and you get all information you need to configure the DMR repater channels. That is input and output frequencies and the color code of the repeater.

Table 1.6. Example channels for a single repeater DB0LDS

Name	RX Freq. (output)	TX Freq. (input)	TS	CC	TX Contact	Grp.List
DB0LDS TS1	439.5625 MHz	431.9625 MHz	1	1	-	WW/EU/DL
DB0LDS DL TS1	439.5625 MHz	431.9625 MHz	1	1	Germany	WW/EU/DL
DB0LDS Sa/Th TS1	439.5625 MHz	431.9625 MHz	1	1	Sa/Th	Sa/Th
DB0LDS TG9 TS2	439.5625 MHz	431.9625 MHz	2	1	TG9	Ber/Bra
DB0LDS TG8 TS2	439.5625 MHz	431.9625 MHz	2	1	TG8	Ber/Bra
DB0LDS BB TS2	439.5625 MHz	431.9625 MHz	2	1	Ber/Bra	Ber/Bra

I think, it is the best to explain the creation of repeater channels using a concrete example for a repeater near to me shown in Table 1.6, “Example channels for a single repeater DB0LDS”. This repeater has the call DB0LDS and has the input frequency 431.9625 MHz and output frequency 439.5625 MHz. According to repeater book, this repeater expects the color code 1. These are the elementary information you need to set for all channels using this repeater. Many CPSs allow to copy or clone channels. This way you only need to enter this basic information once.

At the end of the section called “Time Slots”, I mentioned that trans-regional communication is happening on time slot 1 while regional communication is happening on time slot 2. This is visible in this example. The repeater is located in the region Berlin/Brandenbug (Ber/Bra), consequently all channels with within-region talk-groups have the time slot 2, all others have the time slot 1.

The first channel “DB0LDS TS1” is a generic channel for the time slot 1. There is no default transmit contact defined for this channel. This channel can be used to perform arbitrary direct and group calls by selecting a contact or talk group from the contact list. This means, that a call cannot be started by simply pressing PTT on that channel. First, a contact must be selected that should get called.

The second channel “DB0LDA DL TS1” is almost identical to the first except for the default transmit contact. Here “Germany” (TG262) is selected. This means, if this channel is selected and the PTT is pressed, the talk group 262 is called. By configuring a separate channel for this talk group allows to start a call to it without having to search for it in the contact list. This also allows to temporarily subscribe this talk group on a repeater easily by simply pressing PTT briefly.

Note

Irrespective of the default transmit contact, you can always answer to a call within the hang time.

The third channel “DB0LDS Sa/Th TS1” is also similar to the first two. Here the default transmit contact is the talk group for Saxony/Thuringia (TG2629) to be able to subscribe that talk group at my local repeater and call it easily. Please not that for this channel the time slot 1 is used. The repeater is located in Brandenburg and therefore any communication with Saxony is inter-regional and should happen on the time slot 1. The group list contains only the talk group for Saxony/Thuringia and thus other inter-regional talk groups are not received on that channel.

Channels four, five and six are for repeater-local (TG9), regional (TG8) and the talk group Berlin/Brandenburg (TG2621) calls. As this is all regional communication, it happens on the time slot 2. Also they all have the group list “Ber/Bra” set (see Table 1.4, “Example group lists”). Therefore, all regional talk groups (TG8, TG9, TG2621) are received on that channel. As the default transmit contact, the corresponding talk group is set. If the channel “DB0LDS TG9 TS2” is selected and the PTT is pressed, a call to TG9 is repeated only by the repeater DB0LDS. If the channel “DB0LDS BB TS2” is selected and the PTT is pressed, a call to TG2621 is repeated by almost all repeaters in the region Berlin/Brandenburg. Therefore, choose a talk group that is sufficient for your intended communication.

Note

On any channel, you can start an arbitrary call (group, privat, all) by either selecting the contact from the contact list or even simply entering the DMR number into the keypad of the radio. This is independent from the default contact on the current channel. In the end, the default transmit contact is a convenience feature. With the default contact, channels for frequently used contacts can be created.

The so-called *Admit Criterion* should be set to Color Code for DMR repeater channel. This means, that the radio will only transmit if the channel is free and the color code of the repeater matches the color code of the channel.

Other channel options

The user interface of the manufacturer CPS where you configure the channels is usually very extensive. There are a huge amount of options that control the behavior of the channel. The majority of these options are not used in ham radio applications. Some of these, however, I want to describe here briefly.

The *Admit Criterion* was mentioned before. It controls under which conditions the radios can transmit. There are usually three options. Always does exactly what it says: it allows to transmit always. This option should be chosen for analog FM repeater channels. Channel free means that the radio will only transmit if the current channel is free. This option should be chosen for simplex channels. When Color code is selected, the radio will only transmit if the channel is free and the color code of the repeater matches the color code of the channel. This option should be chosen for DMR repeater channels.

The *TOT* setting or “transmit timeout” specifies the maximum duration of continuous transmission. After that period of continuous transmission, the radio will stop the transmission automatically. The feature is used in commercial applications to avoid the blocking of a channel or talk group by a participant. This option has little sense in amateur radio and can be set to infinity.

The *Emergency System* is a method to signal an alarm or an emergency situation. Also this feature is not used in amateur radio.

The option *Privacy Group* or *Encryption Key* refers to a build-in method of encrypting the traffic. This is actually forbidden in amateur radio.

The flags “Emergency Alarm Confirmed”, “Private Call Confirmed” and “Data Call Confirmed” specify how the radio starts these calls. The radio will first establish a call to the destination and will signal once the call is “confirmed”. Once the confirmation is received, the actual call starts. This options are not used in amateur radio and should be disabled as they may interfere with the normal operation.

The option *Talkaround* allows to operate simplex on a repeater channel. That is the radio transmits and receives on the repeater input frequency. This allows to bypass the repeater and to communicate directly with other participants on the same repeater channel. Also this option make little sense in amateur radio.

When the *RX Only* flag is enabled, the radio cannot transmit on that channel. This may be useful for out-of-band monitoring channels where you are not allowed to transmit.

The *VOX* feature is actually used in ham radio. It stands for “voice operated switch” and allows to start a call using the voice without the need to press PTT. Some radios allow to enable this option on a per-channel bases others only radio-wide.

The “Power” option allows to specify the transmit power level. This can usually be set in predefined steps like Low, Middle, High. Some radios may also allow a fine grained setting of the power level.

The *Scan List* specifies a list of channel that are scanned if a scan is started on that channel. This feature might be used as an alternative to a missing roaming feature (see the section called “Roaming”).

Assembling zones

Once you have assembled all channels of interest, you may notice that the list is quite large. Hence all DMR radios organize the channels in so-called *Zones*. Zones are simple lists of channels that group them into relevant sets usually based on the location. You may therefore collect all channels for “Home”, “Work” and “Holidays” into one zone each. How you organize your zones is up to you.

You may also organize these channels by talk groups. This way you may implement some kind of a manual roaming. Once you left the range of a repeater you may search for another one in the same zone. This way you stay connected to a particular talk group. In contrast to the automatic roaming, you have to select the repeater by hand.

Note

Channels that are not assigned to any zone are usually not selectable by the radio. It is, however, perfectly fine to assign a channel to several zones.

Assembling scan lists

Scan Lists are simple lists of channels. When the scan is started on a particular channel, the channels scan list is used. The radio will then step through that list and may stop on a channel that shows activity. It is then possible to answer the received call. This function allows to observe several channels. Additionally, it is usually possible to specify one or more “priority channels” for a scan list. This channel is then visited more frequently and thus monitored more intensively.

DMR Networks

Within the previous sections, I tried to outline the concepts and some technical details of a DMR network and how a codeplug might be assembled. These concepts, however, apply only to the so-called *Brandmeister* network. This is the network in the background that routes your private and group calls, connects repeaters etc. In Germany, this is the dominant network. But also world wide, it connects the majority of repeaters (about 5000). However, there are also other networks. There is the *DMR-MARC* network and the *DMR+* network. Which network you are likely to encounter depends on your location. In countries like France, Spain, BeNeLux, Poland, Czech Republic and Slovakia, almost all repeaters are connected to the Brandmeister network while in Denmark the DMR+ network dominates. In the USA and Austria, DMR-MARC repeaters aren't rare. All these networks do not differ on the technical level. That is, your DMR-ID is valid in all of these networks and you can use any DMR Tier II radio.

The concepts however, in particular how group calls are performed, depends heavily on the network. This means, that you need to configure the repeater channels for a DMR+ repeater in a different way compared to a Brandmeister repeater.

Reflectors (DMR+)

Reflectors play an important role in the DMR+ network. They represent a talk group within the DMR+ network.

The major difference between a reflector and a talk group is, that they cannot be simply called using a group call. Rather they are subscribed to a local repeater by a private call to the reflector. Then all repeaters subscribed to that reflector behave like a single repeater. You will then participate on that reflector by performing a group call to TG9, the local talk group. Your call will then be sent to the reflector as well as to all other reflectors currently subscribed on the repeater and consequently to all repeater also subscribed to that reflector.

This has the advantage of a much simpler codeplug assembly as only two channels are configured for each repeater. One for each time slot. The default transmit contact will always be the local talk group TG9. To subscribe a reflector, a private call is started to the reflector from the contact list. This implies that the contact list should contain all reflectors you are interested in. This concept is also much closer to the semi-analog concepts of EchoLink. However, advanced features like roaming are not possible this way. Also the repeater transparency gets lost. Instead of simply starting a group call to the destination talk group, the local repeater needs to be “configured”. Once that configuration is done, the communication will happen on the local talk group TG9, even if the communication is not local anymore.


Chapter 2. The Graphical User Interface

General configuration	23
Creating Contacts	24
Assembling RX Groups	25
Creating Channels	26
Edit digital channels	27
Edit analog channels	27
Assembling Zones	28
Assembling Scan Lists	29
Edit Scan Lists	30
Setup GPS/APRS Position Reporting	30
Edit/Create GPS Systems	31
Edit/Create APRS System	31
Roaming	31
Programming the radio	32
Permissions	33
Application Settings Dialog	33
Location settings	33
Radio programming settings	34
Call-sign DB settings	34
Commercial feature settings	34

This chapter describes the graphical user interface (GUI) in some detail.

General configuration

The figure below shows the General Configuration tab of qdmr. This tab is divided into 4 sections: DMR Radio ID, Boot Settings, Audio Settings and Channel Default Values.

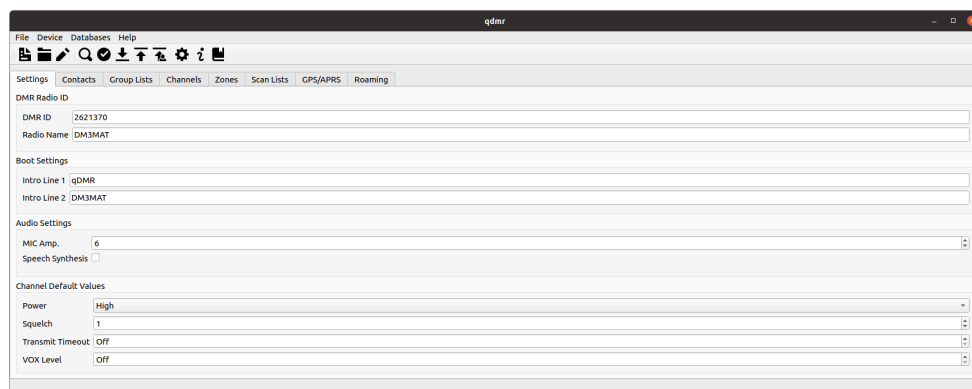

General settings tab.

The general configuration of your radio is the simplest step: You only need to enter your DMR ID and your radio name. The latter is usually just your call sign. If you do not have a DMR ID yet, you can request one at ham-digital.org [<https://register.ham-digital.org/>].

Note

You will always need only *one* DMR ID, even if you have several radios. The DMR network is able to handle multiple endpoints with the same ID. Never request more than one ID, they are a limited resource.

In the rare case, where you actually need more than one DMR ID, for example if you use the same radio from HAM as well as commercial applications, you may add your additional DMR IDs using the Radio IDs tab. This tab is usually hidden and can be accessed by enabling Show commercial features in the application settings (see the section called “Application Settings Dialog” below).

Within the Boot Settings, the Intro Line 1 & 2 specify the text that some radios show on startup. You may enter any text here. Some radios show an image during boot. For those radios, these settings have no effect.


Within the Audio Settings, the MIC amp. option specifies the microphone amplification (if supported by the radio). This must be a value between 1 and 10, where 1 is the smallest amplification and 10 the loudest.

The Speech Synthesis option allows to enable some speech synthesis by the radio. Some radios support some sort of speech synthesis to help visually impaired operators to handle the radio and navigate its menus. If this option is checked, the speech-synthesis will be enabled if the radio supports this feature.

The Channel Default Values block allows to specify some default values that can be referenced by channels (see the section called “Creating Channels” below). This serves two use cases. First, it allows to set some channel properties for all channels that reference these values at once. More importantly, however, some radios do not allow to set these options on a per-channel basis. For these radios, these values are used for all channels.

Creating Contacts


The second tab is the Contact List. Here all DMR contacts are defined, irrespective of their type. It is not only possible to define digital DMR contacts (i.e., private, group and all calls) but also DTMF contact (and in future two-tone, five-tone contacts too). This eases the control of the *EchoLink* features of repeaters.

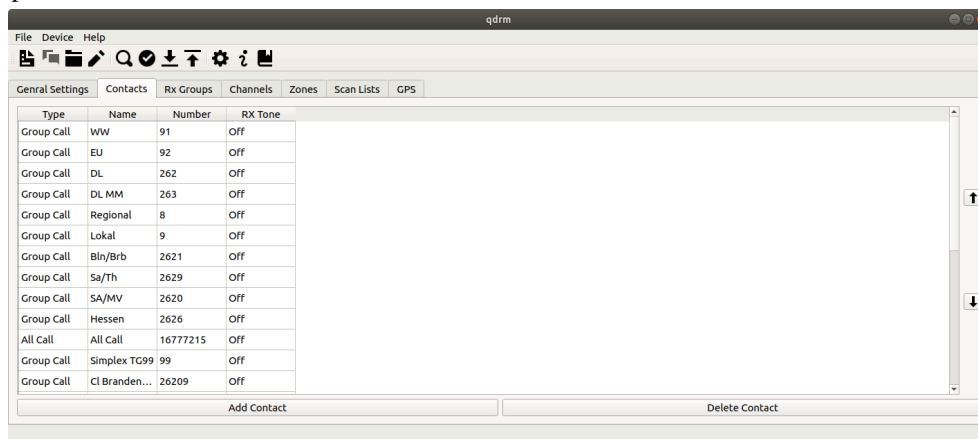

The contact list.

You may add a contact by clicking on the Add Contact button at the bottom. You can also delete a contact by selecting the contact in the list and clicking on the Delete Contact button at the bottom. You may also reorder the contacts by selecting a contact in the list and use the arrow-up and arrow-down buttons on the left to move the contact up and down the list, respectively.

When you create a code-plugin, the contact list should contain all talk groups and reflectors you are interested in as well as a so-called *All Call* contact to the number 16777215. Additionally you may add private calls to several operators you know as well as some *service numbers*.

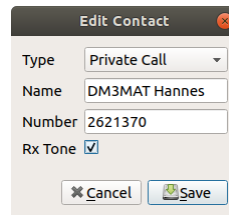

The new/edit contact dialog.


When you click on the Add Contact button or when you double-click a contact entry in the list, the Edit Contact dialog will appear. The first drop-down box allows to choose the type of the call. The possible options are *Private Call*, *Group Call* and *All Call*. The second entry is the name of the contact. Here any text can be entered. The third entry is the number of the contact. This entry gets disabled when *All Call* is selected as the call-type. Finally, if the last option Rx Tone is enabled, you will hear a ring-tone whenever this contact calls you.

Tip

qdmr tries to download the current list of all registered user DMR-ids. The contact dialog will use this information (once downloaded) to resolve call-signs to DMR ids. Just start entering the call-sign into the name field and matching call-signs are shown. The same holds true for Brandmeister *Talkgroup* names.


Assembling RX Groups

RX groups, *RX group lists* or simply *Group Lists* are just lists of *Group Calls* you wish to receive on each channel. Of cause, you may want to receive calls to different talk groups on one channel, hence you have to create these lists of talk groups beforehand.

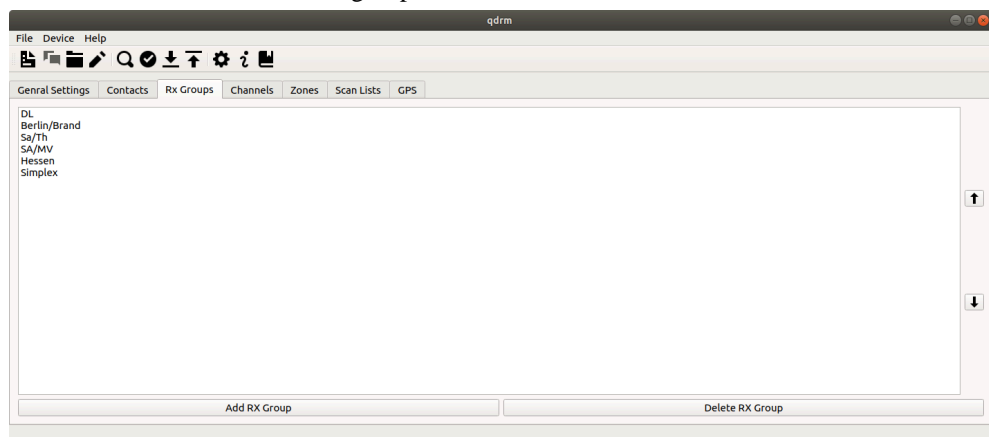

The list of group lists.

The RX Groups tab is just a simple list of all group lists you created. You may add a group list by clicking on the Add RX Group button at the bottom. You can delete a group list by selecting it in the list and clicking on the Delete RX Group button there. You can also edit a RX group list by double-clicking on that group in the list.

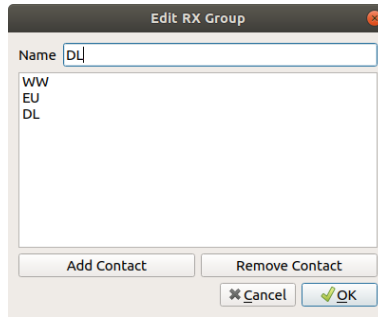

The group list dialog.

When creating a new RX group list or when editing one, the Edit RX Group List dialog will open. Within this dialog, you can change the name of the group at the top. In the center of the dialog, you will find the list of group calls of this group list. You can add group call to the list by clicking on the Add Contact button on the bottom. You can also remove contacts from the list by selecting the contact and clicking on the Remove Contact button. When you are done editing the group list, click on the Ok button. The Cancel button will discard all changes and closes the dialog.


Creating Channels

Creating the list of channels for the DMR radio is the most cumbersome task. Remember, each repeater has two time-slots with possibly multiple talk-groups assigned to each time slot. For the sake of convenience, it is reasonable to define a channel for each talk-group you are interested for each time-slot on every repeater. Thus, instead of a single channel per analog repeater, you will likely define at least 3-4 channels per repeater in DMR.

To ease the burden of creating a lot of channels, qdmr implements some features that should help you in creating these channel. One feature is the automatic retrieval of repeater input and output frequencies from repeatermap.de [https://repeatermap.de]. This is a world-wide map of ham-radio repeaters.

Tip

When you enter your locator into the settings dialog (see the section called “Application Settings Dialog”), qdmr will provide you with a list of nearby repeater and fill in the input and output frequencies. This feature works for both, analog and DMR repeaters.

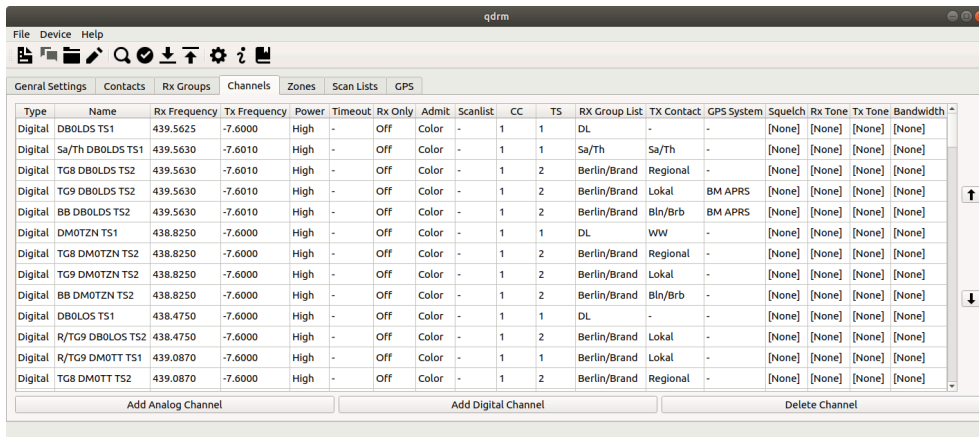

List of channels.

The Channels tab shows the list of all defined channels, irrespective whether they are analog or digital (DMR) channels. You may add an analog or digital channel by clicking on the Add Analog Channel or Add Digital Channel button on the bottom, respectively. You can also delete a channel, by selecting

that channel in the list and clicking on the Delete Channel button at the bottom. You may move a channel up or down the list by selecting that channel and clicking on the arrow-up or -down button to the left, respectively. Finally you can edit a channel by double-clicking it in the list.

Tip

The number of channels usually grow fast and it becomes hard to find channels within the list. To search the list for any channel name or frequency, just hit Ctrl+F to open a search box. This search feature is present in all lists. The channel list, however, is likely the largest.

Edit digital channels

When you double-click on a digital channel or click on the Add Digital Channel button, the digital channel editor dialog will be shown. This dialog allows you to edit or create digital channels.

The digital channel editor.

The dialog is limited to the DMR-channel settings that are relevant for amateur radio. Thus, it is much smaller than the typical dialogs to edit DMR channels in commercial CPSs.

The Name, Rx and Tx Frequency fields contain the chosen name of the channel as well as the transmit and receive frequencies. The latter can be set automatically by using the repeater auto-completion feature: Start to enter the call-sign of a repeater and the RX/TX frequencies will be set using the information from repeatermap.de [https://repeatermap.de]. For simplex-channels RX and TX frequencies must be identical.


The Power setting specifies the power used on that channel. For a nearby repeater, you may reduce the power. Tx Timeout (*TOT*) specifies the transmit timeout in seconds. This limits the continuous transmission time to this period. A value of 0 disables the timeout. *Scan List* allows to specify the scan list associated with this channel. If a scan is started on this channel, this scan list will be used. Each channel may have a different scan list.

The Tx Admit field specifies the *Admit Criterion*, under which condition you are allowed to transmit on the channel. For DMR repeater channels this should be set to Color Code, this means that you may only transmit if the radio received the correct color code of the repeater before. On simplex channels Channel Free should be chosen.

The *Color Code* specifies the color code of the repeater. For simplex channels, this should be set to 1. The *Time Slot* specifies the time-slot of the repeater for this channel. All repeaters have two time slots but different talk groups might be associated with each time slot. The *Group List* specifies the list of group-calls you want to receive on this time-slot. The Tx Contact specifies the default *Transmit Contact* you want to call on this channel when pressing the PTT button. Finally, the GPS System specifies how your location information is sent over this channel (selecting None disables GPS for this channel).

Edit analog channels

When you double-click on an analog channel or click on the Add Analog Channel button, the analog-channel-editor dialog will be shown. This dialog allows you to edit or create analog (FM) channels.

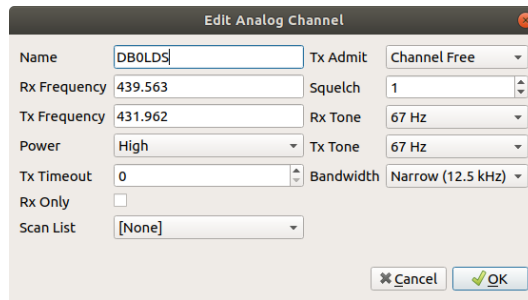

The analog channel editor.

The left column of field are identical to the digital channel dialog, that is Name, Rx and Tx Frequency, Power, Tx Timeout and Scan List.


Like for digital channels, analog channels may also have an Tx Admit criterion. Possible options are Always, Channel Free and Tone. For FM repeaters the Always option should be chosen to allow for a quick turn-around in a QSO. For simplex channels Channel Free should be chosen, as it only allows to transmit when the simplex channel is free. Selecting Channel Free on repeater channels, would prevent transmission while the repeater is active although the last transmission already ended.

The Squelch field specifies the squelch threshold. Rx and Tx Tone specify the *CTCSS/DCS* tones for this channel/repeater. The Rx Tone specifies the subtone that is needed to open the squelch. The Tx Tone specifies the tone that gets transmitted (e.g., to open the repeater).

Finally Bandwidth specifies the band-width of the transmission (i.e., 12.5 or 25 kHz).

Assembling Zones

You may programm a myriad of different channels for you radio. To organize them in handy chunks, zones are used. That is, a zone is just a named list of channels that are relevant for a particular area or a particular situation.

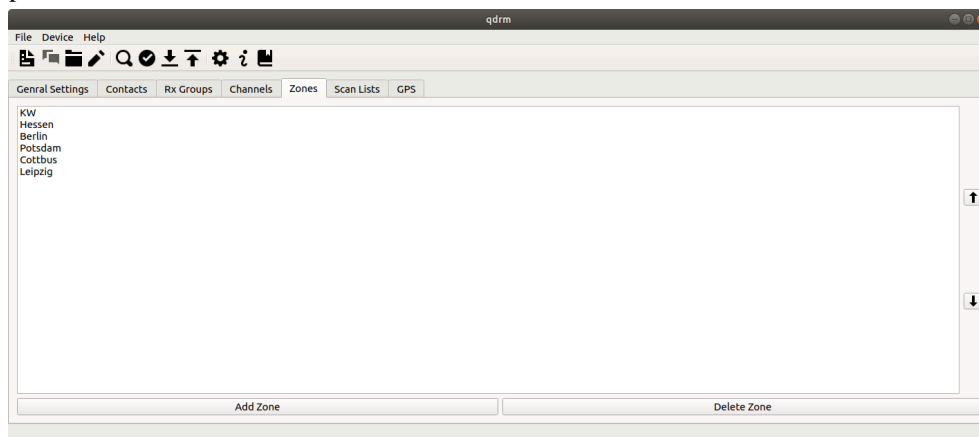


The list of zones.

The Zones just lists all defined zones. You may add a *Zone* using the Add Zone button or you may delete one by selecting the zone in the list and clicking on Delete Zone. You may also alter the ordering of the zones by selecting one from the list and using the up and down buttons on the right.

How zones are implemented differs from radio to radio. For example, some radios allow to set a different zone for each VFO (A or B), consequently these zones are simple lists of channels. Other radios allow to select a single zone for both VFOs. For these radios, a zone consists of two lists of

channels. One for each VFO. qdmr zones follow the second approach. That is, a zone consists of two lists. One of each VFO. When programming radios that support only one channel list per zone, the zone is split into two (unless the second list is empty). One of each VFO.

Double-clicking a zone or clicking on the Add Zone button will open the zone editor dialog.

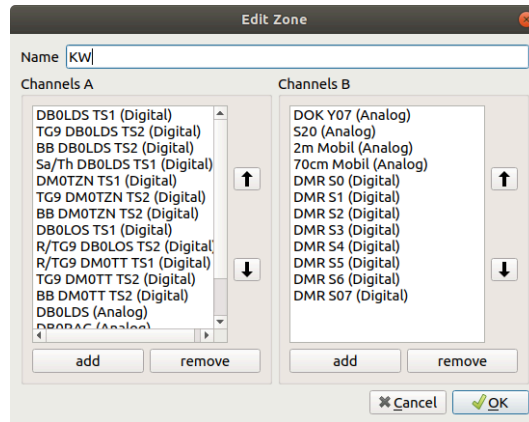

The zone editor.


This dialog allows to add, remove and change the order of the channels within the zone.

Assembling Scan Lists

Scan lists are simple lists of channels that are scanned sequentially, when scanning is stated. A *ScanList* may be associated with an channel.

Note

For many radios, you need to associate a scan list with a channel (see the section called “Creating Channels” above) in the analog or digital channel edit dialog. This determines which scan list is used when a scan is started on a particular channel.

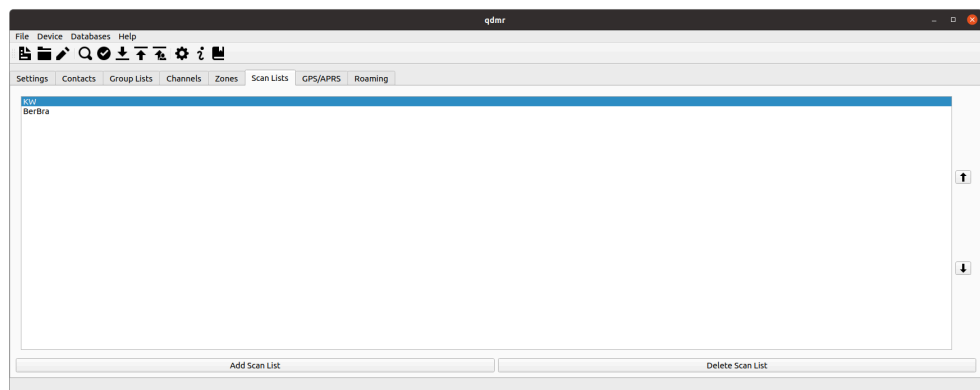


The list of scan lists.

A new scan list can be created by clicking on the Add Scan List button. A scan list can be deleted by selecting the scan list and clicking on the Delete Scan List button. The order of the scan list can be changed by selecting a list and moving it up/down using the up and down buttons on the right.

Double-clicking on a scan list or clicking the Add Scan List button will open the scan-list edit-dialog. This dialog allows to alter/assemble the scan by adding, removing or reordering the channels in the scan list.

Edit Scan Lists

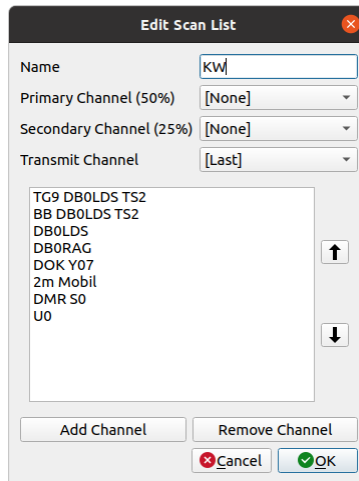

The scan-list editor.

By double-clicking an existing scan list or clicking on the Add Scan List button, the scan-list dialog opens. The Name field allows to specify the name of the scan list.


The optional Primary and Secondary Channel fields allow to specify channels that are visited more frequently. The Primary Channel will be visited 50% of the time. That is, after a channel of the scan list was visited, the primary channel is visited again, and after that, the next channel from the scan list is visited. In the end, the primary channel is scanned half of the time. The secondary channel is similar but gets visited only 25% of the time. The drop down list allows to select none, any channel or the Selected channel. The latter refers to the channel, the scan started on.

The optional Transmit Channel or *Revert Channels* specifies the channel to transmit on during a scan. Here none, any channel, the selected channel and also the Last channel can be chosen. The Last channel refers to the last active channel on the scan list. This allows to answer a call heard during a scan.

Channels can be added to the scan list by clicking on the Add Channel button at the bottom. Similarly, channels can be removed by selecting them and clicking on the Remove Channel button. Like for all other lists, the channels can be moved around within the list by selecting channels and using the up and down buttons to the right.

Setup GPS/APRS Position Reporting

The GPS/APRS tab allows to specify several so-called positioning systems. A positioning system is a collection of settings on how GPS information is send to the digital or analog *APRS* network.

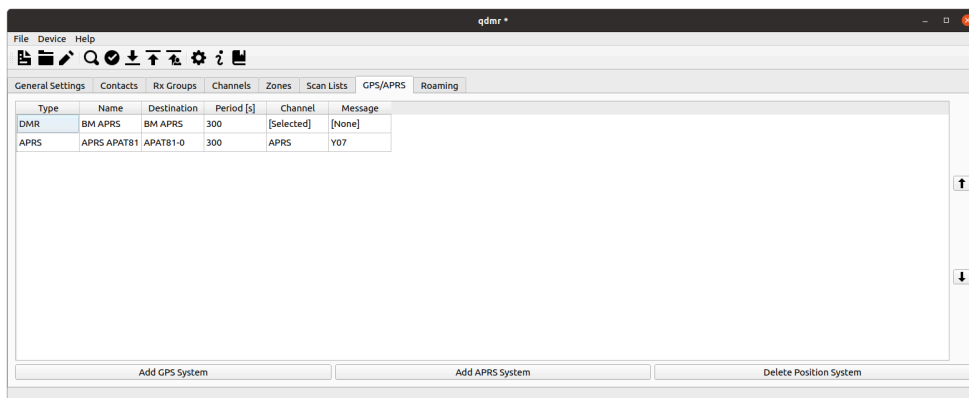

The GPS/APRS settings.

Edit/Create GPS Systems

Double-clicking a GPS system or clicking on the Add GPS System button will open the GPS system edit dialog.

The digital APRS editing dialog.

This dialog allows to specify how the GPS information is send through the DMR network. That is the Name field specifies the name of the GPS system. The Destination field specifies the private-call contact, the information is send to. For example 262999 in the Brandmeister network. The Update Period specifies the period in which the current GPS information is send to the contact. The *Revert Channel* specifies to which channel the radio should switch to, to the position information. This should always be Selected. That is, the radio will always send the information on the currently selected channel.

Edit/Create APRS System

Double-clicking an APRS system or clicking on the Add APRS System button will open the *APRS* system edit dialog.

The analog APRS editing dialog.


This dialog allows to specify how the GPS information is send through the APRS network. That is the Name field specifies the name of the APRS system. The Channel field specifies on which channel the APRS information should be send. This must be an analog channel with one of the typical APRS frequencies [https://en.wikipedia.org/wiki/Automatic_Packet_Reporting_System#Technical_information]. The Source field specifies your call and the source *SSID*, while the Destination field specifies the destination call and *SSID*. Path is an optional string containing the APRS path for the packet. The Icon combo-box allows to select an icon for the packets. These icons are then shown on APRS maps [<https://aprs.fi>]. The Update Period specifies how frequently an APRS packet should be send. Finally, the Message field allows to set an optional text message for the packet.

Roaming

Roaming is a feature that allows DMR radios to select an alternative repeater once you leave the range of the currently selected one. To do that you have to specify so-called *Roaming zones*. Within these


zones, you collect all repeaters that provide access to a particular talk group. When roaming is enabled, the radio will check periodically whether the current repeater is still reachable. If not, the strongest repeater from the selected roaming zone will then be selected instead.

The Roaming tab collects all defined roaming zones.

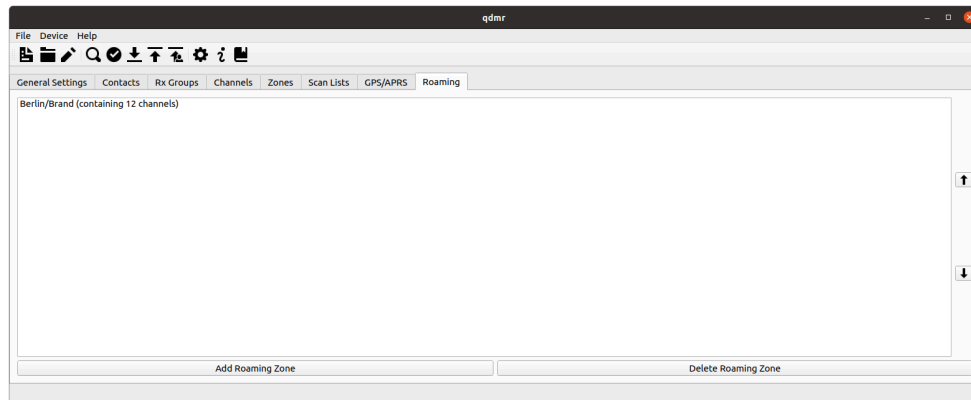

List of roaming zones.

Double-clicking on the roaming zone or clicking on the Add Roaming Zone button will open the Roaming Zone Editor.

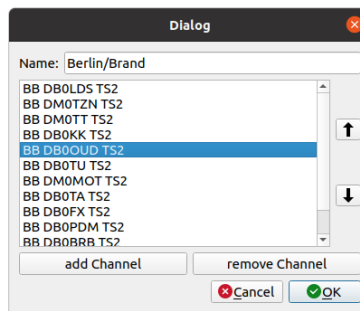

The roaming-zone editing dialog.

Here you can edit the name of the roaming zone as well as selecting the channels that are part of this zone.

Programming the radio

Once the *Codeplug* is finished, it can be programmed onto the radio. Just select the Upload Codplug button in the tool-bar at the top of the window or by selecting Upload from the Device menu.

In a first step, qdmr will try to detect a connected radio. Once a radio is found it will verify the codeplug with that radio. That is, it will check whether any limit are exceeded. For example the number of channels, contacts, group lists, etc.

There are several levels of issues that can be detected when verifying a codeplug with a radio. The lowest level is the “Information”. These are just messages generated to inform you about minor changes made to the codeplug to fit it into the specific radio. For example when zones are split. These information are usually ignored and qdmr will proceed with the upload.

“Warnings” are one level more severe. They are issued if changes are made that change the behavior of the codeplug. The result will still be a working codeplug. They are usually issued when names are too long. When warnings are issued, qdmr will not automatically proceed with the upload. The user, however, can ignore the warnings and continue with the upload. In the application settings (see the

section called “Application Settings Dialog”), you may chose to always ignore verification warnings. In this case, qdmr will continue with the upload automatically even if there were some warnings.

Finally “Errors” are the most severe verification issues. They simply prevent the upload. The user cannot ignore errors as they would result in invalid and even damaging codeplugs being written to the device.

If, however, everything fits into the radio, qdmr will start the upload.

The code-plug upload is a two-step process. First, the current codeplug is downloaded from the radio. This includes all settings. Then the device-specific codeplug is updated and then re-uploaded to the device. This two-step process will maintain all device-specific settings made earlier.

During the up- and download, the qdmr GUI will turn gray (inactive) to prevent any changes to the codeplug during upload/download. However, a progress-bar is shown in the bottom-right to indicate the up- and download progress.

Permissions

When running qdmr or **dmrconf** under Linux, you may need to change the permissions to access USB devices. Create a file `/etc/udev/rules.d/99-qdmr.rules` with the following contents:


```
# TYT MD-UV380
SUBSYSTEM=="usb", ATTRS{idVendor}=="0483", ATTRS{idProduct}=="df11", MODE="666"

# Baofeng RD-5R, TD-5R
SUBSYSTEM=="usb", ATTRS{idVendor}=="15a2", ATTRS{idProduct}=="0073", MODE="666"
```

Finally execute **sudo udevadm control --reload-rules** to activate these new rules.

Application Settings Dialog

The application settings dialog controls some of the behavior of qdmr. The dialog is divided into 4 sections: Location, Radio Programming, Call-Sign DB and Commercial.

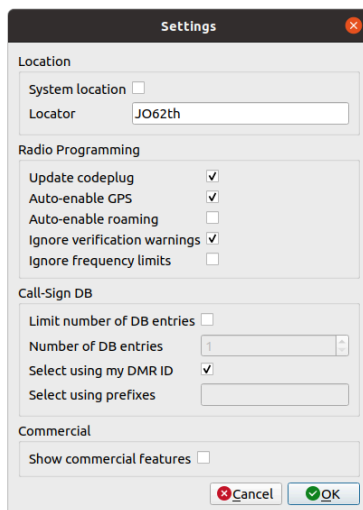

The settings dialog

Location settings

The first section concerns the location of the user. You may enter your *Maidenhead Locator* here or you may enable System location. The latter tries to obtain the current location from the operating system. This information is then used in the channel editors (see the section called “Creating Channels”) to provide auto-completion for repeaters nearby.

Radio programming settings

The second section controls the programming of the radio and how codeplugs are assembled. The first option Update codeplug specifies whether a codeplug is generated from scratch or whether the codeplug currently programmed on the radio gets updated. qdmr does not implement all settings possible for all radios, consequently Update codeplug should be chosen to maintain all settings of the radio that are not touched by qdmr.

For some radios, the GPS and roaming functionality must be enabled explicitly. The Auto-enable GPS and Auto-enable roaming options can be used to automatically enable GPS or roaming. If selected, whenever any channel has a GPS/APRS system or a roaming zone associated with it, the GPS and/or roaming gets enabled globally.

As described in the section called “Programming the radio” section, the upload of a codeplug will be paused if some verification warnings are issued. The Ignore verification warnings option allows to continue silently even in the presence of verification warnings. This may be needed for some radios with some rather short communication timeout. The radio may reset the connection to the computer while the warnings are shown. To prevent this, this option might be used.

The Ignore frequency limits option does exactly what it says. Usually, programming a channel outside of the radio's frequency range would issue an error. However, many radios are able to receive and even transmit outside of the frequency ranges specified by the manufacturer. But be aware, that transmitting outside the declared frequency range may destroy the radio!

Call-sign DB settings

The Call-Sign DB section collects options that control the automatic curation of the call-sign DB. Many radios allow to write a large database of call-signs and DMR IDs to the radio. These DBs are then used to resolve DMR IDs to call-signs, names etc. and display them.

Usually, curating these databases is a cumbersome task. qdmr tries to automate this task. Usually, qdmr will select as many call-signs from the global database it can fit into the radio. Although modern radios will provide a huge amount of memory, not all registered IDs can be programmed. In these (all) cases, qdmr will select only the *closest* IDs to your DMR ID (default Radio DMR ID, see the section called “General configuration”). The DMR IDs are compared by the longest matching prefix. This makes sense as DMR IDs are not random. They share the same prefix for countries and regions. This way, qdmr will first select all IDs from the same region followed by all IDs from the same country etc. Of course, there is no rule without any exceptions. Some countries have several prefixes assigned.

The Limit number of DB entries option and Number of DB entries field allow to limit the number of DB entries written to the device. If the Limit number of DB entries option is disabled, as many entries are written to the device as it can hold.

The Select using my DMR ID option and the Select using prefixes field can be used to control the selection of entries. If the Select using my DMR ID option is enabled, the aforementioned algorithm is used to select the entries. If this option is disabled, a list of prefixes must be specified in the Select using prefixes field. Then the DMR IDs closest to these prefixes are used to assemble the final call-sign DB.

Commercial feature settings

DMR originated as a standard for commercial radios. Consequently, there are many features that are not relevant or even illegal for ham-radio use (e.g., encryption). However, some operators use their handhelds for both ham-radio and commercial applications. Consequently, qdmr cannot ignore commercial features. It can, however, hide them. Enabling the Show commercial features options will show these features.

For now, there are not many commercial features supported by qdmr. Therefore not much is hidden except for the ability to define several DMR radio IDs.

Chapter 3. Extensible Codeplug File Format

Radio settings	35
Radio IDs	36
DMR Radio IDs (dmr)	36
Contacts	37
DMR Contacts (dmr)	37
Analog DMTF Contacts (dtmf)	37
Group lists	38
Channels	38
Common attributes	39
Digital channel attributes	39
Analog channel attributes	40
Zones	40
Scan lists	41
Positioning Systems	41
Common attributes	42
DMR position reporting system attributes	42
APRS attributes	42
Roaming Zones	42

Tip

This document describes the extensible codeplug file format using YAML. If you are unfamiliar with YAML, consider reading a YAML introduction [<https://learn.getgrav.org/16/advanced/yaml>] first. The documentation for the *old* table based conf-file format, can be found in section Chapter 5, *Table Based Codeplug Format*.

The introduction of device specific settings (with version 0.9.0) required an extensible codeplug file format. The *old* table based format did not allow for any extension without braking backward compatibility. The new YAML based format allows for exactly that: Some means to extend the format for device specific settings without breaking the format while maintaining some degree of readability. (Yes, some users use the command line tool and edit their codeplug in a text editor.)

There are several levels, at which device specific extensions may appear within the codeplug. There are global extensions that apply to the entire codeplug. These extensions are located at the top level. There might also be extensions to single channels, contacts, zones, etc. These extensions are then located under the specific element that gets extended.

Radio settings

The radio settings section contains all radio-wide settings. For example the microphone level, boot text etc. For now, there aren't many.

As an example, consider the following general settings

Example 3.1. General radio-wide settings.

```
settings:
  micLevel: 6
  speech: false
  introLine1: qDMR
  introLine2: DM3MAT
  defaultID: id1
  squelch: 1
  vox: 0
  power: High
```

Here, the microphone amplification is set to 6, the speech synthesis is disabled, the two boot text lines are set to “qDMR” and “DM3MAT” respectively and the default DMR radio ID is set to “id1”. The latter is the id of a radio ID defined below.

Also, the radio-wide default squelch, VOX and power level is set. These values can be referenced later in channels. Also, some radios do not allow for these settings to be applied on a per-channel basis. For these radios, these values are used.

Radio-wide Setting Fields

<code>micLevel</code>	Specifies the microphone amplification. Must be an integer between 1 and 10.
<code>speech</code>	Enables/disables the speech synthesis. Some radios can announce the current channel etc for the visually impaired. To enable that feature (if supported by the radio) set this field to <code>true</code> . Must be a boolean value.
<code>introLine1</code> , <code>introLine2</code>	Sets the two boot text lines (if supported by the radio). These text lines will show up on the boot of the radio. If the radio is set to show a picture during boot, these lines are not shown.
<code>defaultID</code>	Specifies which radio ID will be used as the default DMR ID (see the section called “Radio IDs” below). If none is specified, the first defined DMR radio ID will be used.
<code>squelch</code>	Specifies the default squelch level. This value may be referenced in channels or represent the radio-wide squelch setting. Any value in [0-10] is valid, where 0 implies an open squelch (if supported by the radio).
<code>vox</code>	Specifies the default VOX sensitivity. This value may be referenced in channels or represent the radio-wide VOX sensitivity. Any value in [0-10] is valid here, where 0 disables the VOX.
<code>power</code>	Specifies the default transmit power. This value may be referenced in channels or represent the radio-wide power setting. Possible values are <code>Min</code> , <code>Low</code> , <code>Mid</code> , <code>High</code> and <code>Max</code> .

Radio IDs

The `radioIDs`-element specifies a list of radio IDs. Each radio ID is a map that contains a single entry to specify the type. The key of the entry specifies the type name and the value specifies the actual radio ID definition. Currently only the type `dmr` is supported.

As an example consider this radio ID list, containing only a single ID.

Example 3.2. Radio ID definitions

```
radioIDs:  
- dmr: {id: id1, name: DM3MAT, number: 2621370}
```

This radio ID got the identifier `id1`, name `DM3MAT` and number `2621370`.

DMR Radio IDs (`dmr`)

The DMR radio ID definition consist of an optional `id` (necessary to reference that ID later), a name and the DMR ID number.

DMR Radio ID Fields

<code>id</code>	Specifies the identifier of the radio ID. This identifier can later be used to associate the radio ID to channels. Any unique string is valid.
-----------------	--

name Specifies the name of the radio ID. This name may also be used as the radio name. Any non-empty string is valid.

number Specifies the DMR ID for this radio ID. That is any integer between 0 and 16777215.

Contacts

The `contacts` element specifies a list of all contacts. Each contact is a map that contains a single entry to specify the contact type. The key specifies the type name and the value specifies the actual contact definition. Currently there are two possible contact types.

As an example consider this contact list, containing 4 contact definitions. One for each type.

Example 3.3. Contact definitions

```
contacts:
- dmr: {id: ww, name: WW, type: GroupCall, number: 91}
- dmr: {id: cont24, name: DM3MAT Hannes, type: PrivateCall, ring: true, number: 2621370}
- dmr: {id: cont12, name: All Call, type: AllCall, number: 16777215}
- dtmf: {id: dtmf1, name: DTMF example, number: "#123*"}
```

DMR Contacts (`dmr`)

A DMR contact is a simple object and is usually defined in one line. Each contact contains an optional `id` that will be used to reference this contact throughout the codeplug (e.g., in channels, group lists, etc.).

DMR Contact Fields

id Specifies the identifier of the contact. This identifier can later be used to reference the contact. Any unique string is valid.

name Specifies the name of the contact. Any string is valid.

type Specifies the type of the contact. Must be one of `PrivateCall`, `GroupCall` or `AllCall`.

number Specifies the DMR ID for this contact. That is any integer between 0 and 16777215. This element is mandatory for all types except for the `all-call`. For the `all-call`, the default number 16777215 will be used if omitted.

ring If `true`, the radio will ring whenever a call from this contact is received (if supported by the radio). Optional, if omitted set to `false`.

Analog DTMF Contacts (`dtmf`)

An analog DTMF contact can be used to store commonly used DTMF sequences. For example, it may be used to control the *EchoLink* feature of a repeater.

id Specifies the identifier of the contact. This identifier can later be used to reference the contact. Any unique string is valid.

name Specifies the name of the contact. Any string is valid.

number Specifies the DTMF ID for this contact. That is any combination of numbers 0-9 and symbols A-D, *, #. used.

ring If `true`, the radio will ring whenever a call from this contact is received (if supported by the radio). Optional, if omitted set to `false`.

Group lists

A group list collects several digital (DMR) contacts that should be received on a channel associated with this group list. Consequently, a group list consists of a name and a list of contact IDs. The `groupLists` element is then a list of several group list definitions.

As an example, consider the two group lists below:

Example 3.4. Group list definition

```
groupLists:
- {id: grp1, name: DL, contacts: [cont1, cont2, cont3]}
- {id: grp2, name: Berlin/Brand, contacts: [cont6, cont5, cont7]}
```

The first group list has the internal ID `grp1`. This ID can then be used later to reference this group list. The name is set to `DL`. The list of contacts of the group list is then defined as a list containing the IDs of the referenced contacts.

Group list fields

- `id` Specifies the ID of the group list. This ID can then be used to refer to the group list within digital channels. Any unique string is possible here.
- `name` Specifies the name of the group list. Any string is possible here.
- `contacts` A list of digital contact IDs. See the section called “Contacts” above.

Channels

The `channels` list contains all channels defined within the codeplug. Usually, DMR radios support at least two different channel type. Digital channels (DMR) and analog channels (FM). To distinguish these two types, each entry of the channel list contains a map with a single entry. The key specifies the type (either `digital` or `analog`) while the value contains the actual channel definition.

As an example consider the following two channel definitions:

Example 3.5. Channel definition

```
channels:
- digital:
  id: ch5
  name: BB DB0LDS TS2
  rxFrequency: 439.5625
  txFrequency: 431.9625
  power: High
  timeout: 0
  rxOnly: false
  scanList: scan1
  admit: ColorCode
  colorCode: 1
  timeSlot: TS2
  groupList: grp2
  contact: cont7
  radioID: !default
  roaming: !default
- analog:
  id: ch76
  name: DB0LDS
  rxFrequency: 439.5625
  txFrequency: 431.9625
  power: High
  timeout: 0
  rxOnly: false
  admit: Always
  squelch: 1
  bandwidth: Narrow
  rxTone: {ctcss: 67}
  txTone: {ctcss: 67}
```

The first channel is a digital (DMR) channel. Its ID is *ch5* and its name *BB DBOLDS TS2*. The second channel is an analog channel (FM) with ID *ch76* and name *DBOLDS*. Please note, that there are some common attributes like `rxFrequency`, `txFrequency`, `power`, `timeout`, `rxOnly` and `scanList` but also type-specific settings like `timeSlot` or `rxTone` which apply only to digital and analog channels respectively.

Common attributes

The following attributes are common for all channel types.

Common channel fields

<code>id</code>	Specifies the ID of the channel, this can be used later to reference this channel in the section called “Zones” and the section called “Scan lists”. Any unique string is valid here.
<code>name</code>	Specifies the name of the channel. Any string is valid here.
<code>rxFrequency</code>	Specifies the RX frequency in MHz. Any floating point number is valid here.
<code>txFrequency</code>	Specifies the transmit frequency in MHz. If omitted, the RX frequency will be used. Any floating point number is valid here.
<code>power</code>	Specifies the transmit power of the channel. Must be one of <code>Min</code> , <code>Low</code> , <code>Mid</code> , <code>High</code> or <code>Max</code> .
<code>timeout</code>	Specifies the transmit timeout in seconds. Any integer is valid here. Omitting this field or setting it to 0 will disable the timeout.
<code>rxOnly</code>	If set to <code>true</code> , the channel can only receive. Omitting it or setting it to <code>false</code> will allow transmission on the channel.
<code>scanList</code>	Specifies the optional scan list for this channel. If set, this must be a reference to a the section called “Scan lists”.

Digital channel attributes

The following attributes apply only to digital (DMR) channels.

Digital channel fields

<code>admit</code>	Specifies the admit criterion for the channel. This must be one of <code>Always</code> , <code>Free</code> or <code>ColorCode</code> .
<code>colorCode</code>	Specifies the color code of the channel, any number between 0-16 is valid here.
<code>timeSlot</code>	Specifies the time slot of the channel. Must be one of <code>TS1</code> or <code>TS2</code> .
<code>groupList</code>	Specifies the RX group list for this channel. This must be a reference to a the section called “Group lists”.
<code>contact</code>	Specifies the default transmit contact. This must be a reference to a digital the section called “Contacts”. If omitted, no default transmit contact is associated with the channel. Some radios require all channels to have a transmit contact.
<code>aprs</code>	Specifies the positioning system for this channel. If set, this must be a reference to a the section called “Positioning Systems” (either DMR or APRS).
<code>roaming</code>	Specifies the roaming zone for this channel. If set it must be a reference to a the section called “Roaming Zones”. To use the default roaming zone here, consider using the !

`default` tag instead of a direct reference to a specific zone. If omitted, no roaming zone (also not the default one) is associated with the channel.

`radioID` Specifies the radio ID for this channel. If set, it must be a reference to one of the the section called “Radio IDs”. To use the default radio ID here, consider using the `!` `default` tag instead of a direct reference to a specific ID. If omitted the default radio ID is assumed.

Analog channel attributes

The following attributes apply only to digital (FM) channels.

Analog channel fields

`admit` Specifies the admit criterion for the channel. Must be one of `Always`, `Free` or `Tone`.

`sqelch` Specifies the squelch level for the channel. Must be an integer in the range of [1-10].

`bandwidth` Specifies the bandwidth of the channel. Must either be `Narrow` or `Wide` for 12.5kHz or 25kHz respectively.

`rxTone` Specifies the receive sub-tone setting for this channel. That is, the squelch will only open when a certain subtone is received along with the signal. As there are two common subtone standards this attribute is a map with a single entry. The key specifies the type (either `ctcss` or `dcs`) while the value specifies the actual subtone. For CTCSS tones, the value is the subtone frequency in Hz. For DCS it is the code number as an integer. For inverted DCS codes, use negative numbers.

`txTone` Specifies the transmit sub-tone setting for this channel. For details see `rxTone` above.

`aprs` Specifies the APRS positioning system of this channel. If set, it must be a reference to an analog APRS system.

Zones

The `zones` element collects all zones defined within the codeplug. It is just a list of zone definitions. Each zone has an ID (not needed), name and one or two lists of channels. One for VFO A and one for VFO B. Depending on the radio, a zone will be split into two lists (if defined) if the radio handles separate zones for each VFO.

As an example, consider the following zone:

Example 3.6. Zone definition

```
zones:
- id: zone1
  name: KW
  A: [ch1, ch4, ch5, ch2, ch6, ch11, ch12, ch13, ch15, ch16, ch76, ch77, ch78, ch79]
  B: [ch97, ch101, ch102, ch103, ch68, ch69, ch70, ch71, ch72, ch73, ch74, ch75]
```

This zone has the name `KW` and contains two lists of channels. One for each VFO. On radios, where each VFO is assigned a zone individually, this zone will be split into two: `KW A` and `KW B` to match the radios configuration.

Zone fields

`id` Specifies the ID of the zone. For now, there are no codeplug elements that refer to zones.

`name` Specifies the name of the zone. Any string is valid here.

`A` Specifies the channel list for VFO A. This must be a list of references to channels.

B Optional channel list for VFO B. If present, must be a list of references to channels.

Scan lists

Scan lists are simple lists of channels to scan. A scan list might be associated with a channel.

As an example, consider the following scan list:

Example 3.7.

```
scanLists:
- id: scan1
  name: KW
  channels: [ch4, ch5, ch76, ch77, ch97, ch102, ch68, ch112]
```

This scan list has the ID *scan1*, the name *KW* and contains several channels (both analog and digital).

Scan list fields

<code>id</code>	Specifies the ID of the scan list. This ID can then be used to reference this scan list in the section called “Channels”.
<code>name</code>	Specifies the name of the scan list. Any string is valid here.
<code>primary</code>	Specifies the primary priority channel. Usually this channel is scanned very frequently. If set, this must be a reference to a channel. If the tag <code>!selected</code> is used here, the channel from which the scan got started is used as the primary priority channel.
<code>secondary</code>	Specifies the secondary priority channel. Usually this channel is scanned frequently. If set, this must be a reference to a channel. If the tag <code>!selected</code> is used here, the channel from which the scan got started is used as the secondary priority channel.
<code>revert</code>	Specifies the revert channel. That is, the channel to transmit on irrespective of the current channel being scanned. If set, this must be a reference to a channel. If the tag <code>!selected</code> is used here, the channel from which the scan got started is used as the transmit channel. If omitted the radio will transmit on the currently scanned channel.
<code>channels</code>	Specifies the list of channels to scan. Must be a list of reference to channels.

Positioning Systems

Some radios allow to send the current position using DMR or analog APRS. Consequently, there are two types of positioning systems `dmr` and `aprs`.

As an example, consider these two position reporting systems:

Example 3.8.

```
positioning:
- dmr:
  id: aprs1
  name: BM ARPS
  period: 300
  contact: cont21
- aprs:
  id: aprs2
  name: APRS APAT81
  period: 300
  revert: ch104
  icon: Jogger
  message: Y07, QRG 144.675
  destination: APAT81-0
  source: DM3MAT-7
  path: [WIDE1-1, WIDE2-1]
```

The first specifies a digital (DMR) positioning system while the latter defines a APRS system.

Common attributes

The following attributes apply to both, analog APRS and digital DMR position reporting systems.

Common fields

- `id` Specifies the ID of the system. This can be used reference this system in the section called "Channels". Any unique string is valid here.
- `name` Specifies the name of the position reporting system. Any string is valid here.
- `period` Specifies the update period in seconds. If omitted or set to 0, the system will not send any updates periodically.

DMR position reporting system attributes

The following attributes apply only to digital (DMR) position reporting systems.

DMR position reporting system fields

- `contact` Specifies the digital contact, the GPS information is send to. This must be a reference to a digital contact.
- `revert` Specifies the revert channel. That is, the channel the data is send on. If set, it must be a reference to a digital channel. If omitted or set to `!selected`, the currently active channel will be used to send the GPS information.

APRS attributes

The following attributes apply only for APRS position reporting systems.

Analog position reporting system (APRS) fields

- `revert` Specifies the revert channel. That is, the channel the APRS information is send on. This must be a reference to an analog channel.
- `destination` Specifies the destination call and SSID, the information is set to. This must be a string in the form `CALL-SSID`.
- `source` Specifies the source call and SSID. See `destination` for details.
- `path` Specifies the optional packet path. If set, this must be a list of `CALL-SSID` strings.
- `icon` Specifies the icon name to use. The icon name will be fuzzy matched. See for a complete list [<https://dm3mat.darc.de/qdmr/libdmrconf/classAPRSSystem.html>] of icon names.
- `message` Specifies an optional message send along with the position information.

Roaming Zones

Roaming zones are collections of channels, that are scanned for the strongest signal to maintain connection to a particular network or talk group. Consequently, they group channels with the same talk group.

As an example, consider the following roaming zone:

Example 3.9.

```
roaming:
- id: roam1
  name: Berlin/Brand
  channels: [ch3, ch8, ch14, ch18, ch20, ch24, ch26, ch30, ch34, ch38, ch42, ch50]
```

This zone has the ID *roam1* and the name *Berlin/Brand*. This group collects all channels that provide access to the *Berlin/Brandenburg* talk group.

Roaming zone fields

- id** Specifies the ID of the roaming zone. This ID can then be used to refer to this zone. Any unique string is valid here.
- name** Specifies the name of the roaming zone. Any string is valid here.
- channels** Specifies the member channels for this roaming zone. This must be a list of references to digital channels.

Chapter 4. Device specific extensions

OpenGD77 Codeplug Extensions	45
Channel extension	45
Radioddity Codeplug Extensions	46
TyT Codeplug Extensions	46
Button settings extension	46
AnyTone Codeplug Extensions	46

The sole reason for introducing a new YAML based codeplug format was the ability to extend the file format with device specific settings without breaking the format. This was simply impossible with the *old* table based text files.

The present YAML based codeplug file format is extensible at almost any level. That is, device specific elements can be added to single codeplug elements like channels, zones or contacts but also to the codeplug itself. The latter allows to extend the codeplug with new elements.

OpenGD77 Codeplug Extensions

This chapter documents the extensions and settings specific to radios running the OpenGD77 firmware.

Note

The OpenGD77 codeplug is a specialization of the GD77 codeplug. Consequently all the section called “Radioddity Codeplug Extensions” are also applicable to the OpenGD77 codeplug.

Channel extension

This extension allows to specify some channel settings specific for devices running the OpenGD77 firmware. This extension can be added to any channel, analog and digital. For now, this extension only allows to specify the power for the channel in more detail.

Example 4.1.

```
channels:
  - digital:
      id: chl
      name: Example channel
      # all the other channel settings
      openGD77:
        power: P750mW
```

The OpenGD77 channel extension is a mapping named `openGD77`. It contains the device specific settings for that channel.

Attributes

For now, there is only one attribute specifying the more detailed power settings for the channel.

Channel extension fields

`power` Specifies the detailed power settings for the channel. This is one of the following strings `Global`, `P50mW`, `P250mW`, `P500mW`, `P750mW`, `P1W`, `P2W`, `P3W`, `P4W`, `P5W`, `Max`. Where `Global` implies that the global power settings is used and `Max` the maximal possible power is used (usually 7W on VHF and 5.5W on UHF). This power setting overrides the common channel power setting.

Radioddity Codeplug Extensions

There are not extensions defined yet.

TyT Codeplug Extensions

Button settings extension

This extension to the codeplug allows to specify the function for each of the programmable buttons on the radio. Please note that not all Radioddity radios have all buttons described here.

Example 4.2.

```
tytButtonSettings:  
  sideButton1Short: Disabled  
  sideButton1Long: Tone1750Hz  
  sideButton2Short: MonitorToggle  
  sideButton2Long: Disabled  
  longPressDuration: 1000
```

Button settings fields

sideButton1Short,	Specifies the different functions for each button press. Must be one of: Disabled, ToggleAllAlertTones, EmergencyOn, EmergencyOff, PowerSelect, MonitorToggle, OneTouch1-OneTouch6, RepeaterTalkaroundToggle, ScanToggle, SquelchToggle, PrivacyToggle, VoxToggle, ZoneIncrement, BatteryIndicator, LoneWorkerToggle, RecordToggle, RecordPlayback, RecordDeleteAll, Tone1750Hz, SwitchUpDown, RightKey, LeftKey or ZoneDecrement.
sideButton1Long,	
sideButton2Short,	
sideButton2Long	

longPressDuration Specifies the long-press duration in milliseconds.

AnyTone Codeplug Extensions

There are no extensions defined yet.

Chapter 5. Table Based Codeplug Format

Line comments	47
General configuration	47
Contact table	48
RX group list table	48
Digital channel table	49
Analog channel table	50
Zone lists	50
Scan lists	51
GPS Systems	51
APRS Systems	52
Roaming Zones	52

Warning

This chapter describes the old and deprecated table based `conf` text-file format. This format is already incomplete and will remain so. This documentation is maintained for the sake of completeness but you should not use that format in future.

`qdmr` will still be able to import this format but it will not save codeplugs in that format anymore. The new codeplug format is documented in Chapter 3, *Extensible Codeplug File Format*.

This configuration file format represents a generic configuration for a wide variety of radios. It is a simple text file containing simple key-value definitions like the DMR ID as well as tables like the table of channels, contacts, etc.

The aim of this config format is to be human-readable and writable. This would allow users to write config file by hand and share them easily, as well as enable users to modify shared configurations using a text editor. To this end, the format must be intuitive and to some degree self-documenting.

Within the following sections, I will describe that text format in some detail.

Line comments

To document your configuration, you may use so-called line-comments. These comments start with the character `#` and end at the end-of-line.

```
# A comment, everything in this line is ignored
ID: 12345678 # Another comment
```

General configuration

The general configuration settings of some radios can be overly complex with a huge amount of options. The vast majority of these settings, however, are useless for ham-radio purposes. Thus the possible settings for the general configuration of the radio are reduced to 6 key-value pairs.

The DMR ID of course, is absolutely necessary and specifies your personal DMR number. Keep in mind, that you do NOT need to get a unique DMR ID for each radio you own! All your radios can share the same DMR ID. The DMR ID is specified using the "ID" keyword as

```
ID: 12345678
```

In rare situations, where you actually need several different radio IDs (e.g., if you use the same radio for HAM and commercial applications), you may specify them as a comma separated list. The first ID in the list will be handled as the default ID for the radio.

The radio name is a string, that the radio may display somewhere on the screen. It does not have any effect on the behavior of the radio or gets transmitted. You may set this entry to your call-sign. For example:

```
Name: "DM3MAT"
```

The two intro lines might be shown on the screen of your radio on startup. You may set these to any string you like. They are also cosmetic and don't have any effect on the behavior of your radio. For example

```
IntroLine1: "Hello"
IntroLine2: "MYOCALL"
```

The microphone sensitivity/amplification can also be set (on some radios) using the MicLevel entry. This entry is also a number between 1 and 10. The larger the level the larger the microphone amplification. This value may vary heavily from model to model.

```
MicLevel: 2
```

The "Speech" option enables the speech synthesis of the radio if supported. Possible settings are "on" and "off".

```
# Speech-synthesis ('On' or 'Off'):
Speech: Off
```

Contact table

The contact table is a list of DMR contacts like

Contact	Name	Type	ID	RxTone
1	"DM3MAT"	Private	2621370	+
2	"DMR All Call"	All	16777215	-
3	"Simplex TG99"	Group	99	-
4	"Global"	Group	91	-
5	"EU"	Group	92	-
6	"Regional"	Group	8	-
7	"Lokal"	Group	9	-
8	"Deutschland"	Group	262	-
9	"Berlin/Brand"	Group	2621	-
10	"Berlin City"	Group	26212	-
11	"Brandenburg"	Group	26209	-
12	"Sachs/Thu"	Group	2629	-
13	"R Brandenburg"	Private	4044	-

These contacts can be personal contacts like DM3MAT, so-called all-calls and group calls. The contact table starts with the "Contact" keyword and ends with an empty line. The remaining keywords ("Name", "Type", "ID", "RxTone") are ignored, however, they are part of the self-documentation of the config file.

Following the "Contact" keyword, each line represents a single contact in the contact list. The first column represents a unique internal ID for the contact. It must not necessarily be in ascending order, any unique number will do. The second column is the name of the contact. Any string can be used here. The third column specifies the type of the contact. This must be one of the keywords "Private", "Group" or "All", meaning private, group or all-calls, respectively. The fourth column specifies the DMR ID for the contact. Please note, that an all-call requires the specific DMR ID 16777215 to work as an all-call. The last column specifies, whether an incoming call from this contact will cause a ring-tone. Here "+" means enabled/yes and "-" disabled/no.

RX group list table

RX group lists are simple named lists of one or more contacts. These lists may include group, all or even private calls. RX group lists are assigned to channels. They form a group of contacts (e.g., talk groups) you may want to listen to on a particular channel. Usually these group lists form a collection of talk groups that are specific for a particular region.

RX group lists are defined within the config file like

Grouplist	Name	Contacts
1	"Lokal"	7,9
2	"Deutschland"	8
3	"Global"	4
4	"EU"	5
5	"Sachs/Thu"	13,12
6	"Simplex"	2,3,6,7
7	"Berlin/Brand"	9,10,11,13

The group list table starts with the keyword "Grouplist". The following keywords (Name & Contacts) are ignored, but form a kind of self-documentation for the config file.

Following the "Grouplist" keyword, each RX group list is defined by a single line. The first column specifies the internal unique ID for the group list. This can be any number as long as it is unique. The second column contains the name of the group list as a string. This can be any non-empty string. The third column contains the comma-separated list of contact IDs that form that group list.

Digital channel table

The digital channel table defines all digital DMR channels. As digital channels have some different options compared to analog channels, they are not defined within the same table. However, they share the same IDs. So be careful not to assign the same identifier to analog and digital channels.

The digital channel table has the form

Digital	Name	Receive	Transmit	Power	Scan	TOT	RO	Admit	CC	TS	RxGL	TxC	GPS	Roam	ID
11	"DM0TT Ref"	439.0870	-7.6000	High	1	-	-	Free	1	1	7	12	-	+	-
12	"DM0TT BB"	439.0875	-7.6000	High	-	-	-	Free	1	2	7	15	1	+	-
84	"DMR_S0"	433.4500	433.4500	High	2	-	-	Free	1	1	6	9	-	+	-
85	"DMR_S1"	433.6120	433.6120	High	2	-	-	Free	1	1	6	9	-	+	-
86	"DMR_S2"	433.6250	433.6250	High	2	-	-	Free	1	1	6	9	-	+	-
87	"DMR_S3"	433.6380	433.6380	High	2	-	-	Free	1	1	6	9	-	+	-
88	"DMR_S4"	433.6500	433.6500	High	2	-	-	Free	1	1	6	9	-	+	-
89	"DMR_S5"	433.6630	433.6630	High	2	-	-	Free	1	1	6	9	-	+	-
90	"DMR_S6"	433.6750	433.6750	High	2	-	-	Free	1	1	6	9	-	+	-
91	"DMR_S7"	433.6880	433.6880	High	2	-	-	Free	1	1	6	9	-	+	-

The digital-channel table starts with the keyword "Digital" and ends with an empty line. The next keywords (Name, Receive, Transmit, Power, Scan, TOT, RO, Admit, CC, TS, RxGL and TxC, GPS, Roam, ID) are ignored and are maintained for the self-documentation of the configuration file.

Each channel is defined within a single line. The first column is the unique channel identifier (any unique number among analog AND digital channels). The second column specifies the channel name as a string. The third column specifies the RX frequency in MHz and the fourth column the TX frequency in MHz. Alternatively, a TX frequency can also be specified in terms of an offset relative to the RX frequency. In this case, the offset must be prefixed with either "+" or "-". The 5th (Power) column specifies the power level to use. Here, either the "High" or "Low" keyword must be used. The 6th (Scan) column specifies the ID of the scan-list (see below) attached to the channel. This list will be used whenever a scan is started on this channel. The 7th column (TOT) column specifies the TX time-out-timer in seconds or "-", if disabled. The 8th column (RO) specifies whether the channel is RX only ("+") or not ("-"). If enabled, you cannot transmit on that particular channel. The 9th (Admit) column specifies the TX admit criterion for the channel. This must be either "-" or one of the keywords "Free" and "Color". "-" indicates that there is no restriction in transmitting on that channel. The radio will transmit whenever PTT is pressed. The "Free" keyword indicates that the radio will only transmit if the channel is free. The "Color" keyword indicates that the radio will only transmit if the channel is free and the color-code of the repeater matches the specified color-code of the channel (see next column). The 10th column specifies the color-code of the channel. The 10th (CC) column specifies the color-code of the channel. To avoid interference between neighboring radios and repeaters on the same frequency (in case of DX conditions), the repeater and radio will only react to transmissions on a channel with the matching color-code. The color-code can be any number between 0 and 15. The 11th (TS) column specifies the time-slot for this channel. Due to the audio compression used in DMR, it is possible to operate two independent channels on a single frequency by using time-slicing. DMR uses two time-slots. This option specifies which of the two time-slots is used for the channel. On simplex

channels, this time-slicing is irrelevant, as there is no central instance (the repeater) that defines what time-slot 1 or 2 is. The 12th (GPS) column specifies the GPS or APRS system (see below) to use on that channel. The 13th (Roam) column specifies the roaming zone. This can either be '-' meaning *roaming disabled* or an ID of a roaming zone specified below. Finally, the 14th column (ID) specifies the DMR ID to use with this channel. That is either '-' for *default ID* or an index (0-based) of the ID list above.

Analog channel table

The analog channel table collects all analog (FM) channels. As digital channels have some different options compared to analog channels, they are not defined within the same table. However, they share the same IDs. So be careful not to assign the same identifier to analog and digital channels.

The analog channel table has the form

Analog	Name	Receive	Transmit	Power	Scan	TOT	RO	Admit	Squelch	RxTone	TxTone	Width	APRS
1	"Y07"	144.6750	144.6750	High	1	-	-	Free	1	-	-	12.5	-
2	"S20"	145.3000	145.3000	High	-	-	-	Free	1	-	-	12.5	-
3	"Mobil 2m"	145.5000	145.5000	High	-	-	-	Free	1	-	-	12.5	2
4	"DBORAG"	439.3000	-7.6000	High	1	-	-	Free	3	-	-	12.5	-
5	"DBOLOS"	438.7750	-7.6000	High	1	-	-	Free	1	-	-	12.5	-
6	"DBOLUD"	438.5750	-7.6000	High	1	-	-	Free	1	-	67	12.5	-
19	"DBOBLO"	439.2750	-7.6000	High	1	-	-	Free	3	-	-	12.5	-
20	"DBOSP-2"	145.6000	-0.6000	High	1	-	-	Free	3	-	-	12.5	-
21	"DBOSP-70"	439.4250	-7.6000	High	1	-	-	Free	3	-	-	12.5	-

The analog channel table starts with the "Analog" keyword and ends with an empty line. The remaining keywords right after "Analog" (i.e., "Name", "Receive", "Transmit", "Power", "Scan", "TOT", "RO", "Admit", "Squelch", "RxTone", "TxTone" and "Width") are ignored but are part of the self-documentation of the config file.

Each line within the table specifies a single channel. The first column specifies the unique ID of the channel. This ID can be any number that is unique among analog AND digital channels. The second (Name) column specifies the name of the channel as a string. Any string can be used here. The third (Receive) column specifies the RX frequency of the channel in MHz. The fourth (Transmit) column specifies the TX frequency in MHz or alternatively, an offset relative to the receive frequency in MHz by prefixing "+" or "-". The 5th (Power) column specifies the transmit power. This must be either the "High" or "Low" keyword. The 6th (Scan) column specifies the scan-list ID for this channel or "-" if there is no scan-list assigned to the channel. A scan-list (see below) is just a collection of channels that gets scanned whenever scanning is started on a particular channel. The 7th (TOT) column specifies the transmit time-out in seconds or "-" if disabled. The 8th (RO) column specifies whether this channel is receive-only with either "-" meaning disabled and "+" enabled. If enabled, it is impossible to transmit on that channel. The 9th column specifies the admit criterion on that channel. This must be either "-" meaning that there is no restriction when to send on that channel, the keyword "Free" meaning that the channel must be free to transmit or the keyword "Tone" meaning that the channel must be free and the RxTone must match. The 10th (Squelch) column specifies the squelch level for the channel. This must be a number between [0-10]. The larger the value, the stronger the signal must be to open the squelch. The value 0 disables the squelch. The 11th (RxTone) specifies the receive CTCSS tone frequency in Hz. The squelch will then only open, if the signal is strong enough (see previous column) and the specified tone is received. If set "-" the RX tone is disabled and the squelch will open if the signal is strong enough. The 12th (TxTone) column specifies the CTCSS tone to transmit in Hz or "-" if disabled. This feature is used by some repeaters to open their squelch and to start repeating to avoid conflicts between repeaters operating on the same frequency (e.g., in case of DX conditions). The 13th (Width) column specifies the bandwidth of the channel in kHz. This can be 12.5kHz narrow-band or 25kHz wide-band. Finally, the 14th column specifies the APRS system ID to use or "-" for *APRS disabled*.

Zone lists

Zones are just collections of channels. Typical radios can hold thousands of channels. To keep large numbers of channels manageable, they can be organized into zones. Usually, these zones represent a

geographical area and all repeaters in that area are then grouped into zones. Of course, a single channel can be added to multiple zones. Please note that for many radios, channels can only be accessed via a zone. That means, a channel that is not a member of any zone may not be accessible.

The zone table is defined within the configuration file as

Zone	Name	VFO	Channels
1	"KW"	A	1,9,11,12,14,8,55,15,4,5,6,20,21,22,19,48
1	"KW"	B	1,3,2,81,82,84,85,86,87,88,89,90,91
2	"Berlin DMR"	A	10,9,11,12,34,35,31,32,33,27,28,29,30,38,39
2	"Berlin DMR"	B	1,3,2,81,82,84,85,86,87,88,89,90,91
3	"Berlin FM"	A	20,21,19,18,22,23,24,25
4	"Potsdam"	A	42,43,44,45,46,47,40,41
7	"Leipzig"	A	75,76,72,71,73,70,74,77,78,80,79,69
8	"Simplex"	A	1,3,2,81,82,84,85,86,87,88,89,90,91

The zone table starts with the keyword "Zone" and ends with an empty line. The remaining keywords (Name and Channels) are ignored but are part of the self-documentation of the configuration file. The first column specifies a unique identifier for each zone. This can be any integer as long as it is unique. The second (Name) column specifies the name of the zone as a string. Any string is valid here. The third column specifies the VFO (either A or B) for that zone. This allows to specify different channels for the two VFOs of the radio. For example, it allows to specify a list of repeater channels for VFO A and some simplex and calling frequencies on VFO B. The fourth column contains the comma-separated list of channel IDs for the zone and VFO. A reference to any channel-type can be used here, analog and digital.

Scan lists

A scan list is a list of channels, that are scanned whenever scanning is started on a channel the scan list is associated with. A single scan list might be associated with several channels. For example, all channels within that scan list.

The list of scan lists has the following form

Scanlist	Name	PCh1	PCh2	TxCh	Channels
1	"KW"	1	84	Sel	1,84,2,9,11,8,14,4,5,20,21,19,6
2	"DMR Simplex"	84	-	Sel	84,85,86,87,88,89,90,91

The list of scan lists starts with the "Scanlist" keyword and ends with an empty line. The remaining keywords (Name, PCh1, PCh2 & Channels) are ignored but are part of the self-documentation of the configuration file format. A scan list is defined with every other line. The first column specifies the unique identifier of the scan list. The second (Name) column specifies the name of the scan list as a string. Any string will do. The third and fourth columns specify the first and second priority channels for the scan list respectively. These priority channels are visited more frequently during the scan. That is, the first priority channel is visited 50% of the time while the second is visited 25% of the time. These channels might also be set to "-" indicating that there is no priority channel. The 5th column specifies the transmit channel during the scan. Possible options are "Last", "Sel" and any valid channel index. The "Sel" keyword implies that the radio will transmit on the selected channel when the scan started. The "Last" keyword implies that the radio will transmit on the channel at which the scan stopped on, while specifying any channel index implies, that the radio will transmit on that channel. Finally the 6th column specifies the comma-separated list of channels that form the scan list.

GPS Systems

The GPS system list just specifies the contact to which some positional information is sent to (which usually gets forwarded to the APRS system) and at which period this information is sent.

GPS	Name	Dest	Period	Revert
1	"BM APRS"	20	300	-

The first column specifies the ID of the GPS system. This can be any number >0. The second column (Name) specifies the name of the GPS system. The third column specifies the destination contact ID

(see Contacts above), the position information is sent to. The fourth column (Period) specifies the update period in seconds. The fifth column (Revert) specifies the revert channel. In amateur radio, this can be left blank ("-").

APRS Systems

The APRS system list specifies the various informations for transmitting your position using analog APRS. As digital channels may use either DMR or analog APRS for position reporting, this list shares a namespace with the GPS system list. That is, the ID must be unique across both lists.

APRS ID	Name	Channel	Period	Source	Destination	Path	Icon	Message
2	"APRS APAT81"	103	300	DM3MAT-7	APAT81-0	"WIDE1-1WIDE2-1"	"Jogger"	"Y07"

The first column specifies the ID of the APRS positioning system. This must be unique across APRS and DMR position reporting systems. The second column specifies the name of the system as a string. The third column specifies the revert channel. That is, the analog channel the APRS information is transmitted on. The 4th column specifies the period with which the position gets reported. The 5th and 6th columns specify the source and destination calls and SSIDs respectively. The 7th column specifies the path string. This is list of calls and SSIDs stored as a string without any separators. The 8th column specifies the map icon name [<http://www.aprs.org/symbols/symbols-new.txt>]. The name does not need to match official icon name exactly. The icon is identified as the closes matching icon name with respect to the Levenshtein distance [https://en.wikipedia.org/wiki/Levenshtein_distance] between the given and all icon names. That is, *jogger* and *jogging* will select the same icon. Finally, the 9th column specifies a freely selectable text to be send with the position report.

Roaming Zones

Roaming zones allow to stay in contact with a particular talk group when moving round and the current repeater gets out of range. In this case, the radio will search for the strongest repeater in a list (the so-called *roaming zone*) and switch to this repeater.

Roaming ID	Name	Channels
1	"Berlin/Brand"	3,7,13,17,19,23,25,29,33,37,41,49

Therefore, a roaming zone is a simple channel list. The first column specifies the ID of the zone. This ID can be used in the digital channel table to associate a channel with a specific roaming zone. The second column specifies the name of the zone and the third column holds the comma-separated list of channel in each zone.

Chapter 6. The dmrconf command line tool

Reading and writing codeplugs	53
Reading a codeplug	53
Writing a codeplug	55
Writing the call-sign DB	56
Encoding a call-sign DB	56
Various features of dmrconf	56
Getting help	57
Detecting the radio type	57
Inspecting binary codeplugs	57
Danger zone	57
dmrconf	59

Beside the graphical user interface provided by `qdmr` (see Chapter 2, *The Graphical User Interface*), there is also a command line tool allowing to read/write codeplugs to the radios. It is based on the same library called `libdmrconf` [<https://dm3mat.darc.de/qdmr/libdmrconf>] and thus provides the same features like `qdmr`.

This chapter will briefly describe the command line tool and how it can be used to handle codeplugs from the command line.

The command line tool might be helpful in cases, where the codeplug file (see Chapter 3, *Extensible Codeplug File Format*) gets assembled by a script. Then the same script may upload the codeplug to the radio using the command line tool.

Additionally to the the features of the GUI (see Chapter 2, *The Graphical User Interface*), the command line tool provides some features to analyze the memory representation of the binary codeplugs as well as debugging their implementation.

Reading and writing codeplugs

The major feature of the command line tool is certainly the ability to read and write codeplugs from and to the device. The majority of the action happens automatically. Like the detection of the radio. If something goes wrong, an error message will be written to `stderr`. A more detailed logging can be enabled by passing the `--debug` flag.

Reading a codeplug

To read a codeplug, the `read` command is used. The codeplug can be stored in several formats. The human readable extensible codeplug format (YAML), the old table based format and as a binary memory dump of the codeplug memory on the device. **dmrconf** detects the format based on the file extension or by means of additional flags. The latter is particularly important if the read codeplug should be written to `stdout` for piping it to another program for further processing.

```
dmrconf read codeplug.yaml
```

Will simply read the codeplug from the detected device and stores it in the extensible codeplug format in the file `codeplug.yaml`. The format was detected by the file extension `yaml` which refers to the extensible codeplug format using YAML.

The same call with a file name `codeplug.conf` would store the codeplug in the old table based `conf` format.

Note

Not that the latter is way less expressive and does not support the storage of device specific settings. This format is basically kept for backwards compatibility and should not be used anymore.

To store the memory dump of the codeplug memory of the radio, the file extension should be `dfu`.

As mentioned above, it is also possible to dump the decoded codeplug to `stdout` allowing to pipe the codeplug into another program for processing. This can be done by omitting the output filename. Then, however, the output format is not specified anymore. In this case, one the explicit format flags `--yaml`, `--csv` or `--bin` must be used to specify in which format the codeplug should be written. These flags can also be used to store a codeplug in a particular format in arbitrarily named files.

```
dmrconf read --yaml | python my_script.py
```

This example reads the codeplug from the connected device and decodes it. The decoded codeplug is then piped to the python script `my_script.py`.

Decoding binary codeplugs

It is also possible decode binary codeplugs that has been read from the device earlier and stored as a memory dump (i.e., in a `dfu` file). This step is actually the second step automatically performed during reading. When reading a codeplug, in a first step the memory dump of the codeplug is read from the device. In a second step, the read binary codeplug is then decoded and dumped in a human readable format.

The **decode** command then performs that second step. To do that, it needs two additional information: The radio type, from which this codeplug was read and the format to write the decoded format to. Like for the **read** command, the latter can be passed by the output filename extension or via an additional flag.

```
dmrconf read codeplug.dfu
dmrconf decode --radio=uv390 codeplug.dfu codeplug.yaml
```

This example performs the same actions like a simple **read** command (assuming a TyT MD-UV390 is connected). It first downloads the binary codeplug. This time, the memory dump is stored in a binary from (`dfu` file). The second command then decodes the binary codeplug into the extensible codeplug format (`yaml` file), assuming that the binary codeplug stems from a TyT MD-UV390.

Since version 0.8.1, it is now also possible to decode some manufacturer binary codeplug files as they are produced by the manufacturer CPS. To signal the decode command to treat the file as a manufacturer CPS file, you need to pass the `-m` or `--manufacturer` and the `--radio` option. The latter tells the **decode** command the format of the file. That is, the call

```
dmrconf decode -m --radio=uv390 manufacturer_cps_file.rdt codeplug.yaml
```

Will decode the manufacturer CPS file `manufacturer_cps_file.rdt` assuming it is a file generated by the CPS for the TyT MD-UV390. Like for the “normal” decoding the output format must be specified either by file extension or flag.

Debugging the codplug decoding

Under normal circumstances, it makes no sense to first read the binary codeplug from the device and then decoding it in a separate step as the read command will do that for you.

However, if there is a bug in **dmrconf** that gets triggered by your codeplug on the device, the binary codeplug is an invaluable resource for debugging the application. Consider filing an issue at the bug tracker [<https://github.com/hmatuschek/qdmr/issues>] and include the binary codeplug as an attachment.

If you like, you can also send me your codeplug directly. I'll keep it confidentially.

Writing a codeplug

To write a codeplug into the device, the **write** command is used. The codeplug can be read from several formats. The extensible codeplug format (yaml file) as well as the old table based format (conf file). It is not possible to write binary codeplugs without decoding them first. Like for the **read** command, **dmrconf** will detect the format based on the file extension or by passed flags.

```
dmrconf write codeplug.yaml
```

This example will write the codeplug stored in the extensible codeplug format in `codeplug.yaml` to the connected device. Before writing the codeplug to the device, the connected device gets detected and the codeplug gets verified.

If the verification step fails, one or more error messages are written to `stderr` describing the issue with the codeplug. One verification step is the check whether all channel frequencies are within the frequency limits specified by the manufacturer. The latter check can be disabled using the `--ignore-frequency-limits` flag.

There are also some flags controlling the assembly of the binary codeplug. When the `--init-codeplug` flag is set, the codeplug will be generated from scratch using default values for all options not explicitly specified in the codeplug file. This might be used to initialize a brand new radio. However, any changes made to the radio settings are lost.

When this option is not set, the codeplug gets encoded and written in a two-step process. First the current binary codeplug is downloaded from the radio. Then the codeplug file is used to update the binary codeplug. The result is then written back to the device. This ensures that all settings made in the radio are kept, unless they are explicitly set in the codeplug file.

The `--auto-enable-gps` and `--auto-enable-roaming` flags will tell **dmrconf** to enable the GPS or roaming feature whenever any of the programmed channels use the GPS or a roaming zone. (This depends also on the ability of the radio.)

Verify a codeplug

The aforementioned verification of the codeplug file can also be performed separately using the **verify**. This command also needs to know against which radio the codeplug should be verified. The radio must be specified using the `--radio` option.

```
dmrconf verify --radio=d878uv codeplug.yaml
```

This command will verify the codeplug stored in `codeplug.yaml` in the extensible codeplug format against an AnyTone AT-D878UV. Like for the **write**, any issues are written to `stderr`.

Like for the **write** command, the verification can be altered using the `--ignore-frequency-limits` flag.

Encoding codeplugs

It is also possible to perform the encoding step of the codeplug separately. This can be done with the **encode** command. Like for the **verify** command, the **encode** command also needs the radio for which the codeplug should be encoded. The input format of the codeplug is again specified by either the file extension of the codeplug file or by flags.

```
dmrconf encode --radio=opengd77 codeplug.yaml codeplug.dfu
```

This call will encode the codeplug `codeplug.yaml` specified in the extensible codeplug format for a radio running the OpenGD77 firmware and stores the resulting binary codeplug in `codeplug.dfu`.

Like for the **write** command, the encoding can be controlled using the `--auto-enable-gps` and `--auto-enable-roaming` flags.

Writing the call-sign DB

The command line interface also allows to write a call-sign DB (also known as *Talker Alias*) to the radio if the radio supports it. This can be done with the **write-db** command. This command behaves similar to the call-sign DB upload in `qdmr`. That is, it tries to select the call-signs being written automatically.

Although many radios provide a huge amount of memory for the call-sign DB, they cannot hold the entire list of assigned DMR IDs. Therefore a selection of relevant call-signs must be done. `qdmr` and **dmrconf** do that based on the DMR ID of the radio. DMR IDs are not random. They follow a pattern similar to land-line phone numbers. DMR IDs within a certain continent, country and region share a common prefix. This way, it is possible to select DMR IDs that are *close* by selecting IDs that share a common prefix.

`qdmr` and **dmrconf** therefore uses the default DMR ID of the radio to select the call-signs to be written. This ID is obtained by `qdmr` from the codeplug. **dmrconf** does not require a codeplug to be present for the upload. Consequently, it requires the explicit specification of the ID to base the selection on. The ID can be specified using the `--id` or `-I` options. It is also possible to just specify the prefix instead of an ID.

```
dmrconf write-db --id=2621
```

This example writes a call-sign DB to the connected radio using the DMR prefix 2621 (for the region Berlin/Brandenburg in Germany). The radio will fill the available space with as many call-signs as possible. So for the previous example, **dmrconf** will not only program all IDs with the prefix 2621 but as many as possible starting with those *close* to that prefix. It is possible to limit the number of call-sign encoded using the `--limit` or `-n` option.

Unfortunately, there is always an exception to a rule: Some countries have several prefixes or you may program the call-signs of several countries that are not necessarily *close* in terms of their prefixes. For these cases, it is possible to specify a list of prefixes to the `--id` option.

```
dmrconf write-db --id=262,263 --limit=10000
```

This example will select and write up to 10000 (given the radio can hold that amount) call-signs starting with those *closest* to the prefixes 262 and 263 (both prefixes for Germany).

Encoding a call-sign DB

Like for the binary codeplug, it is also possible to generate and store the binary representation of the call-sign DB using the **encode-db** command. This command is only useful for debugging purposes as the binary representation of the call-sign DB cannot be written to the device.

The **encode-db** takes the same arguments as the **write-db** command but additionally needs a filename to store the encoded DB into as well as the radio to encode for using the `--radio` option.

```
dmrconf encode-db --radio=d878uv --id=262,263 --limit=10000 callsigns.dfu
```

Like the previous example, this one encodes up to 10000 call-signs starting with those closest to the prefixes 262 and 263 for a AnyTone AT-D878UV radio and stores the result into `callsigns.dfu`.

Various features of dmrconf

Beside reading and writing codeplugs or writing the call-sign DB, there are some more commands and features that mainly concern the debugging of the codeplug and call-sign DB encoding and decoding. If you are interested in the codeplug internals, you may use these commands to study them.

Getting help

As usual for command line tools, a brief help text about the commands and options gets written to `stdout` when the `--help` or `-h` option is passed. No other commands passed are executed then.

Similar to the `--help` option, it is possible to print the version number of **dmrconf** using the `--version` or `-v` option. Like for the `--help`, no other commands passed get executed.

To get a list of keys identifying radio models when specified using the `--radio` option, the `--list-radios` can be passed. This will print a small table to `stdout` that lists the keys for each known radio as well as the model and manufacturer name.

Detecting the radio type

The command **detect** solely detects the radio. No data is written or read from the device (except of the radio model information). This command can be used to check whether a radio is detected correctly.

```
dmrconf detect
```

This command will try to detect the connected radio. If a known radio is found, the model and manufacturer name is written to `stdout`. If no radio is detected or if the model is unknown or unsupported, an error message is written to `stderr`.

Inspecting binary codeplugs

The **encode**, **encode-db** and **read** commands can store the codeplug and call-sign DB in binary form in a DFU file. The generated file is a valid DFU (device firmware update) file, that can be handled with other DFU tools.

A DFU file may contains several so-called images. Each image may contains several so-called elements. The latter represents a segment of memory with an associated memory address.

The **info** command produces a hex-dump of the DFU file that is written to `stdout`. It can then be inspected using **more** or **less**.

```
dmrconf info codeplug.dfu | less
```

This example will generate a hex dump of the encoded codeplug in the specified DFU file `codeplug.dfu`. The result is piped to **less** for easy reading. The hex dump also prints some information about the file structure as well as memory addresses. It also collapses repetitive memory sections (similar to **hexdump -C**). To this end, this command is a helpful tool for debugging the encoding of codeplugs and call-sign DBs.

Danger zone

Warning

You are about to enter the land of pain. Continue on your own risk.

Some radios are actually identical to others. They also identify them self as a different radio. An example for such a radio is the Retevis RT3S, this radio is simply a relabeled TyT MD-UV390. The RT3S actually identifies itself as a MD-UV390. From the perspective of the CPS, these two radios are indistinguishable. Consequently, `qdmr` and **dmrconf** will always identify the RT3S as a MD-UV390.

There are, however, virtually identical radios. These are radios that actually identify them self as different models but the firmware, communication protocol and codeplug is basically identical to another model. An example for such virtually identical models are the AnyTone AT-D868UV and the BTech DMR-6X2. Each model identifies itself correspondingly and thus is distinguished by the CPS.

Some of these relationships between virtually identical models are known to qdmr and **dmrconf**. In these cases, the CPS will treat these radios as identical. s

Some of these close relationships between models are not known to **dmrconf**. In these cases, **dmrconf** will stop with an error that a radio is unknown although it actually supported as a different model. In these rare cases, it is possible to override the radio detection using the `--radio` option.

This option is usually used to specify the type whenever the radio model is not detected. This option also overrides the model detection and thus allows to handle virtually identical radios. For example, if the relationship between the AT-D868UV and the DMR-6X2 would have not been known to **dmrconf**, a codeplug could read anyway from the device by calling

```
dmrconf read --radio=d868uv codeplug_6x2.yaml
```

Here the radio detection (resulting the detection of a DMR-6X2) gets overridden and the radio is handled as a AT-D868UV.

If you know of such virtually identical radios that **dmrconf** does not recognize, consider filing an issue at the bug tracker [<https://github.com/hmatuschek/qdmr/issues>].

Warning

Of course, handling a radio differently as it identifies itself may cause permanent damage to the radio. So you should be very sure that the radios are actually identical when overriding the radio detection routines.

Name

`dmrconf` — Command-line tool for programming DMR radios.

Synopsis

```
dmrconf [OPTIONS] [COMMAND] [file]
```

Description

dmrconf is a command-line tool to programm DMR radios. That is, generating and uploading codeplugs to these radios. To this end, **dmrconf** uses a common human-readable text format to describe the codeplug for all supported radios (see below). This allows to share codeplugs between different radios.

Additionally, **dmrconf** also allows to download codeplugs from the radio and to store it in the human-readable text format.

Commands

detect	Detects a connected radio. This command does not take any additional options.
read	Reads a codeplug from the radio and stores it into the given file. This command may need the <code>-c</code> or <code>-b</code> options if the file type cannot be inferred from the filename.
write	Writes the specified codeplug to the radio. This command may need the <code>-c</code> or <code>-b</code> options if the file type cannot be inferred from the filename.
write-db	Writes the call-sign database to the device. This command may need the <code>--id</code> option to select call-signs if the complete database does not fit into the device. If specified, all callsigns closest to the specified ID are used.
verify	Verifies the codeplug with the connected radio or the specified radio passed with the <code>--radio</code> option. This command may also need the <code>-c</code> or <code>-b</code> options if the file type cannot be inferred from the filename.
encode	Encodes a CSV codeplug as a binary one for the connected or specified radio using the <code>--radio</code> option.
encode-db	Encodes the call-sign database as a binary one for the connected or specified radio using the <code>--radio</code> option. This command may need the <code>--id</code> option to select call-signs if the complete database does not fit into the device. If specified, all callsigns closest to the specified ID are used.
decode	Decodes a binary codeplug and stores the result in human-readable form.
info	Prints some information about the given file.

Options

<code>-c</code> or <code>--csv</code>	Specifies the file format for the input or output file for the verify , read and write commands. This option is not needed if the filetype can be inferred from the filename. That is, if the file ends on <code>.conf</code> or <code>.csv</code> .
<code>-y</code> or <code>--yaml</code>	Specifies the file format for the input or output file for the verify , read and write commands. This option is not needed if the filetype can be inferred from the filename. That is, if the file ends on <code>.yaml</code> .

<code>-b</code> or <code>--bin</code>	Specifies the file format for the input or output file for the verify , read and write commands. This option is not needed if the filetype can be inferred from the filename. That is, if the file ends on <code>.bin</code> or <code>.dfu</code> .
<code>-m</code> or <code>--manufacturer</code>	Specifies the file format for the input file for the decode command to be the manufacturer binary codeplug format.
<code>-R</code> or <code>--radio=NAME</code>	Specifies the radio for the verify , encode or decode commands. This option can also be used to override the automatic radio detection for the read and write commands. Be careful using this option when writing to the device. An incompatible code-plug might be written.
<code>-I</code> or <code>--id=DMR_ID</code>	Specifies the DMR ID or a comma separated list of DMR ID prefixes for the write-db or encode-db commands.
<code>-n</code> or <code>--limit=N</code>	Limits several amonuts, depending on the context. When encoding/writing the callsign db, this option speicifies the maximum number of callsigns to encode.
<code>--init-codeplug</code>	Initializes the code-plug from scratch. If omitted (default) the code-plug on the device gets updated. This maintains all settings made earlier via the manufacturer CPS or on the radio itself.
<code>--auto-enable-gps</code>	Automatically enables GPS/APRS if at least one GPS/APRS system is defined and used by any channel.
<code>--auto-enable-roaming</code>	Automatically enables roaming if at least one roaming zone is defined and used by any channel.
<code>--ignore-limits</code>	Disables the enforcement of limits. Warnings are still show.
<code>-h</code> or <code>--help</code>	Displays a short help message.
<code>--list-radios</code>	Lists all supported radios.
<code>-v</code> or <code>--version</code>	Displays the version number.
<code>-V</code> or <code>--verbose</code>	Enable debug messages.

Supported Radios

The following list contains all supported radios and their names for the `--radio` option.

<code>opengd77</code>	All radios running the Open GD77 firmware
<code>d868uve</code>	Anytone AT-D868UVE
<code>d878uv</code>	Anytone AT-D878UV
<code>d878uv2</code>	Anytone AT-D878UVII
<code>d578uv</code>	Anytone AT-D578UV
<code>uv390,</code> <code>rt3s</code>	TYT MD-UV390 or Retevis RT3S
<code>md2017,</code> <code>rt82</code>	TYT MD-2017 or Retevis RT82
<code>gd77</code>	Retevis GD-77

Bugs

This program is still under development and may contain bugs that may cause harm to the radios and may even destroy them. Hence you may use this software on your own risk. If you want to have guarantees, consider using the CPS (code-plug programming software) supplied with your radio.

Glossary

Admit Criterion

The admit criterion specifies a criterion under which transmissions on a channel are allowed. These criteria can be defined for both, analog and DMR channels. Irrespective of the channel type, the admit criteria “always” and “channel free” can be selected. The former simply always allows to transmit. The former requires the channel to be free.

For analog channels, usually there is also the criterion “tone”. This criterion would only allow transmissions if the matching CTCSS tone or DCS code has been received. For analog repeater operation, the criterion “channel free” should not be used as this would prevent any transmissions while the repeater is active.

For digital channels, usually there is also the criterion “color code”. This criterion would only allow transmissions if the matching color code has been received. To this end, this criterion is similar to the “tone” criterion for analog channels.

All Call

An all-call is a special type of an DMR call to a special number (*16777215*). All radios are supposed to receive this call irrespective of their particular configuration. This call type is usually used in emergency situations or on simplex channels.

Unfortunately, the local talk group (number 9) is frequently used on simplex channel although only those radios will receive calls to this talk group if it is in the group list assigned to the simplex channel. To be on the safe side, use the all-call for simplex calls.

Automatic Packet Reporting System

The Automatic Packet Reporting System is a protocol that uses single broadcast frequencies to transmit small amounts of information through a network of repeaters. Usually but not limited to position reports. This allows other services (e.g., aprs.fi [<https://aprs.fi>]) to display that information on a map. The usual APRS frequencies are 144.390 MHz (North America), 144.800 MHz (Europe) and 145.175 MHz (Australia).

Codeplug

The term “codeplug” is rather loosely defined. Usually it refers to the binary representation of the configuration of a radio that is written to the radio to configure it. It contains all contacts, channels, zones, settings, etc that form the configuration of the radio.

Color Code

DAPNET

DAPNET, short for Decentralized Amateur Paging Network does exactly what it says. It is a network of transmitters that transmit pager messages in the UHF band, usually at 439.9875 MHz. As the old pager operated at a frequency near by, they can be modified to operate at that frequency and can therefore be used in amateur radio.

The DAPNET is particularly popular with emergency operators as it allows for a convenient and reliable multicast notification.

EchoLink

EchoLink is a network of analog FM repeaters that allows to link repeaters within this network temporarily. That is, two FM repeaters that are linked via EchoLink behave like a single repeater irrespective of their location. This network also allows to access the repeaters directly through the internet. This is particularly helpful if one cannot reach any repeater.

Group Call	A group call is simply a call to a talk group. That is, not to a single participant but rather to a group of participants. Every participant that has this talk group in their group list can receive this call. See also <i>Group List</i> and <i>Talk Group</i> .
Group List	<p>A group list is a simple list of talk groups. A group list is then assigned to a channel to specify which group calls to receive on that channel. If a talk group is not listed in the group list of a channel, the radio will ignore calls to this talk group on that channel.</p> <p>The DMR network cannot know which talk groups you are interested in. You have to tell your radio using group lists.</p>
Maidenhead Locator	
Private Call	
Revert Channel	
Roaming Zone	
SSID	
Talk Group	
Time Slot	
Transmit Contact	
Transmit Timeout	Specifies the time of continuous transmission, after which the transmission is interrupted automatically. This prevents the accidental blocking of a repeater or talk group by transmitting continuously.
Scan List	
Zone	